



Components

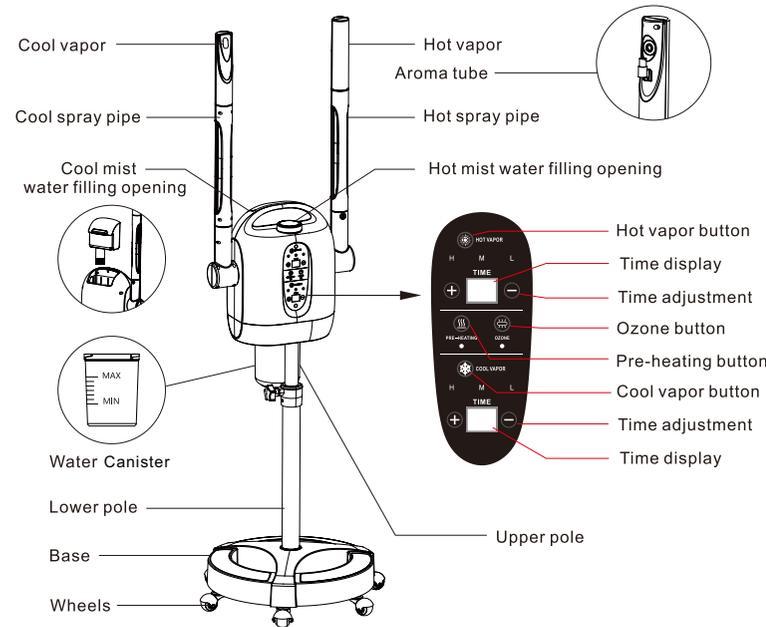

PART LIST

A:Main body 1PC	B:Cool spray pipe 1 PC	C:Hot spray pipe 1 PC	D:Upper pole 1 PC	E:Lower pole 1 PC
F:Base 1 PC	G:Wheels 6 PCS	H:Bolt 2 PCS	I:Washer&Bolt 1 PC	J:Tool 1 PC

INSTALLATION

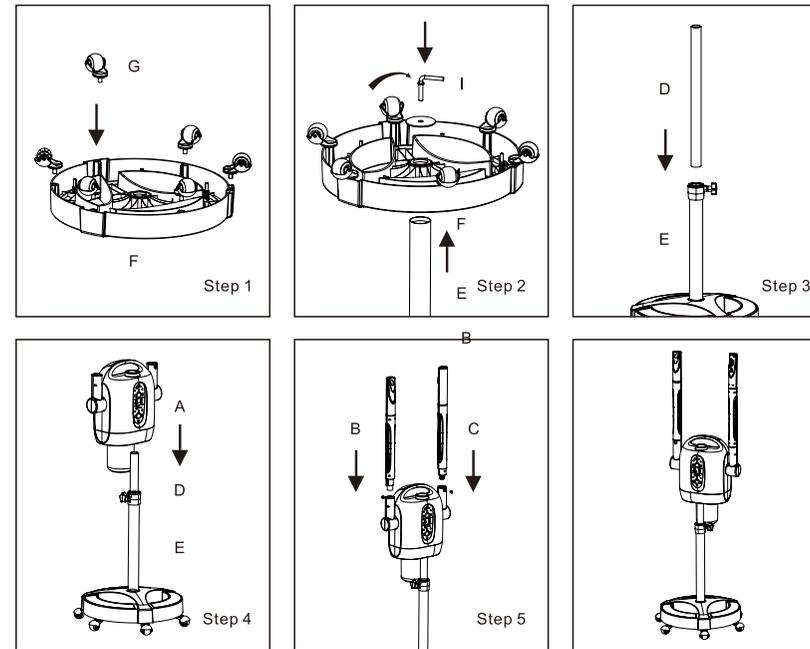


WARNING

- Do not place the device upside down or tilt it when it is in operation; use it only on a level surface.
- Do not start the device without water in the water canister. Doing so may cause damages to the unit.
- Do not add any additives such as essential oils into the water. Doing so may cause damages to the unit or to the user.
- Clean the water canister frequently. Make sure to turn off the power and unplug before taking off the water canister and allow time for the unit to completely cool.
- Do not touch the water canister when it is hot.
- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Do not use an extension cord with this appliance.
- Never hold this facial steamer close to your face in one position as this may cause scalding.
- Make sure to drain the water if the device is left not in use for a long time.
- This device has been thoroughly tested and examined. In case of any malfunction, please contact your local distributors. Non-authorized repair or tampering will invalidate the warranty.

OPERATION


HOT VAPOR OPERATION

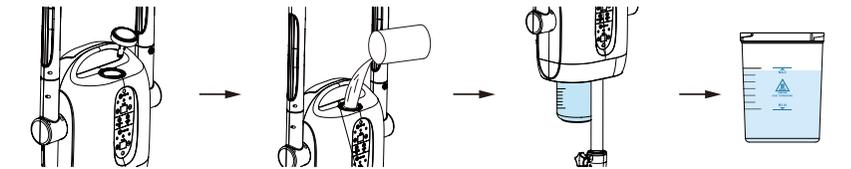

Fill the water canister through the top opening with clean water. Make sure the water level is between the MAX and MIN marks.

- Assemble the machine with reference to the above diagram.
- Find a comfortable location for using the facial steamer, adjust the height to desired level.
- Connect to power and the facial steamer will be in standby mode.
- Press the "HOT VAPOR" button, the indicator light for "H" will illuminate, which means High Hot vapor, If you need to adjust the Hot vapor, press the "HOT VAPOR" button to "M" which means Medium Hot vapor (L=Low, M=Midium, H=High).
- By default, the time display will flash 30 minutes, press "+" or "-" buttons to set the working time. Each press will increase or decrease 5 minutes. The time range will be 5-60 minutes. Once the working time is set, the unit will start working in 3 seconds. The steam will start to spray in about 5minutes.
- Press the "PRE-HEATING" button, By default, the time display will flash 60 minutes, press "+" or "-" buttons to set the working time. Each press will increase or decrease 5 minutes. the time range will be 5-90 minutes. Once the working time is set, the unit will start working. Hot steam sprays in 20 seconds after pre-heated.
- By default, the OZONE generator will start to work and the OZONE button will light up in Blue. Press the "OZONE" button to turn on or turn off the OZONE.

COOL VAPOR OPERATION

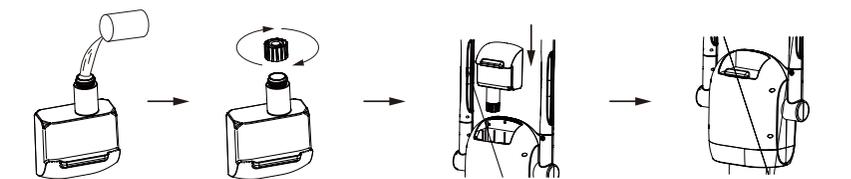

Take out the water tank, twist off the lid, pour water through the opening at the top, close the lid tightly, and then insert the water tank into the main engine.


- Press the "COOL VAPOR" button, the indicator light for "H" will illuminate, which means High Cool vapor, If you need to adjust the Cool vapor, press the "COOL VAPOR" button to "M" which means Medium cool vapor (L=Low, M=Midium, H=High)
- By default, the time display will flash 30 minutes, press "+" or "-" buttons to set the working time. Each press will increase or decrease 5 minutes. The time range will be 5-60 minutes. Once the working time is set, the unit will start working in 3 seconds.
- Make sure to drain the water if the device is left not in use for a long time.

MAINTAINING

Clean the water canister every 1 or 2 months depending on frequency of usage.


HOT VAPOR OPERATION

- 1: Unplug the unit and make sure the water canister is NOT HOT.
- 2: Remove the water canister from the main body by turning it counterclockwise.
- 3: Wash the water canister with clean water. DO NOT use corrosive detergents.
- 4: Install the water canister to the main body by turning it clockwise.

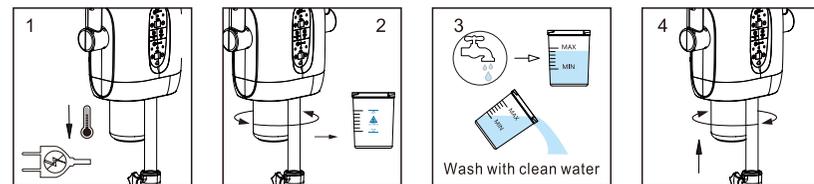

If the heating pipe is incrustated, clean it with 5% vinegar solution

COOL VAPOR OPERATION

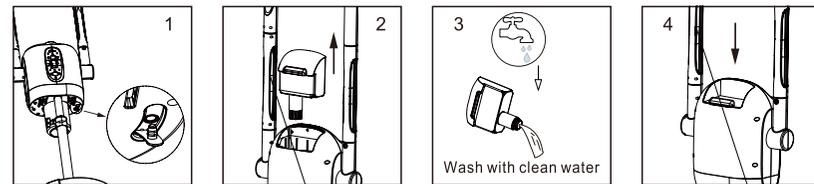


- 1: Unplug the drain plug at the bottom of the main engine, drain the water.
- 2: Take out the cold spray box, open the lid and drain the water.
- 3: Clean the tank with clean water.
- 4: Put the water tank back into the main engine.

TYPES OF WATER TO BE USED

This facial steamer works with almost all types of clean water, such as purified water, distilled water, mineral water, tap water and etc. However, for the best performance and proper maintaining of this unit, please use purified water or distilled water.

WARNING: Please do not add any additives or essential oils into the water. Doing so may damage the unit or cause injure to users.

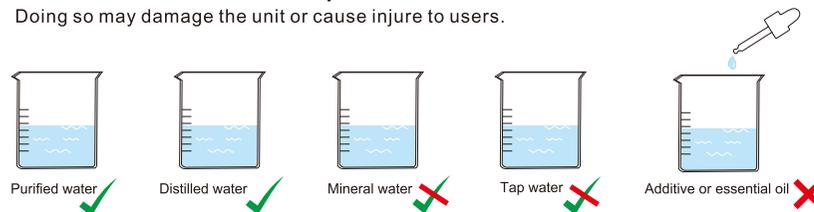

WARRANTY CARD

Owner Warranty certificate

(Users save, show it to the maintenance point of repair)

Product name:	Warranty period:
Model:	Invoice number:
Place of origin:	Date of purchase:


Maintenance records

Repair date:	Date of inspection:
Failure, maintenance, handling of:	
Maintenance units:	Repairer's signature:

Rated Voltage : 120V 50/60Hz 220V-240V 50/60Hz
 Rated Power : 800 W

CE RoHS Made in China

Instruction Manual

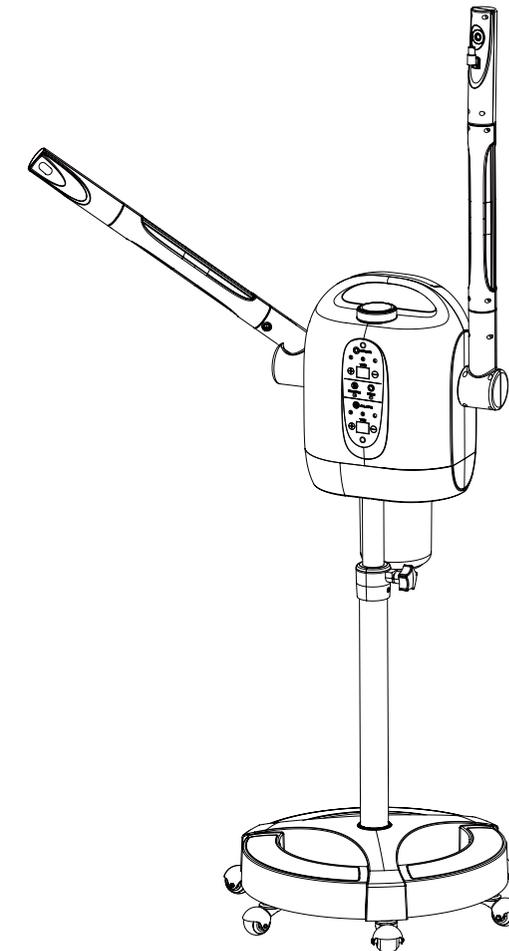

2-in-1 Cool and Hot Facial Steamer

State-of-the-art design for super creative spa professionals

