 


DIR[®]

Beckman

 
7198

INSTRUCTION MANUAL

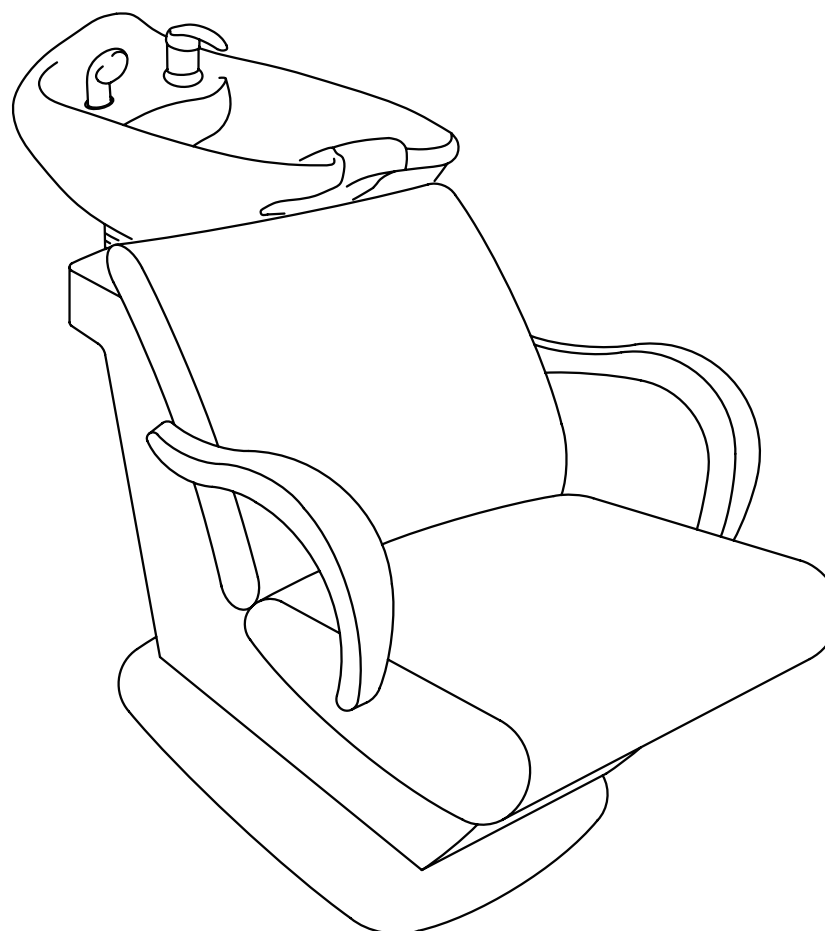


EN


List of Parts & Tools

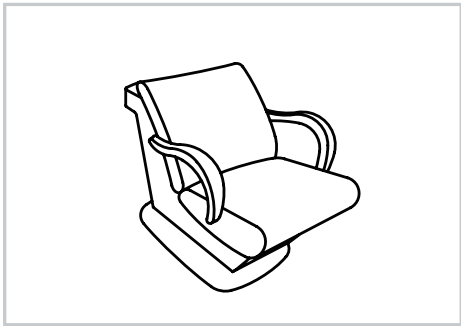


101001

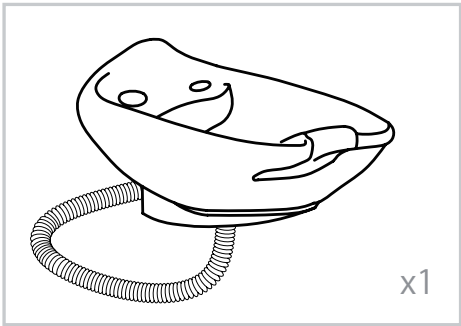 


0350/0388

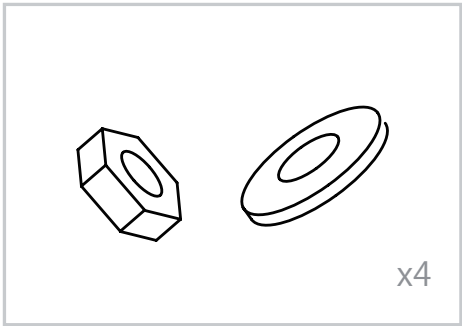 


101003

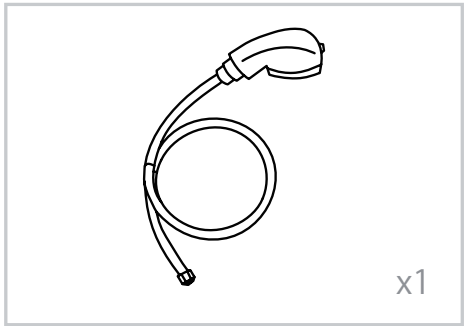 


101004

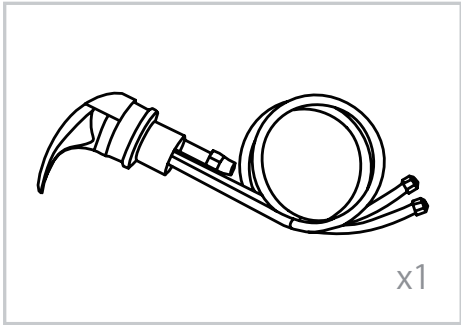 


101005

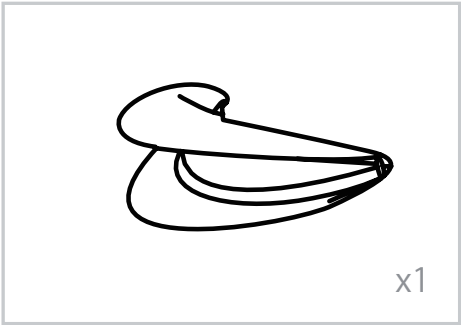 


101006

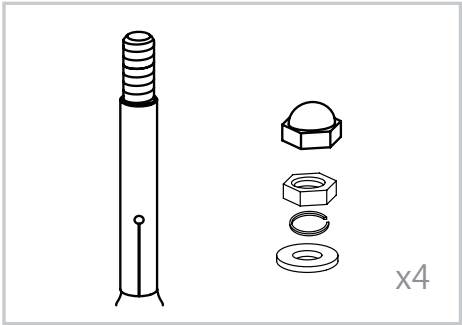 

101007

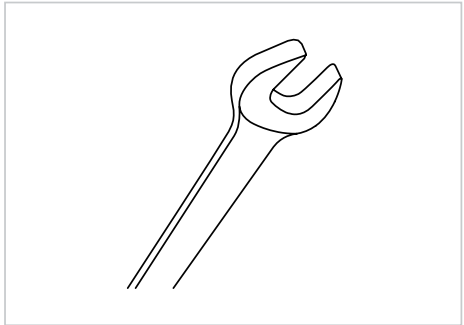 

101008

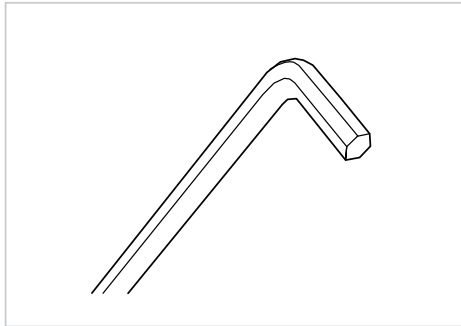 


101009


Type	USA size	UK size
Water supply lines Adapter	5/8"	1/2"
Drain Hose Connector	1 1/4"	3.2cm

Step 1

 
0350

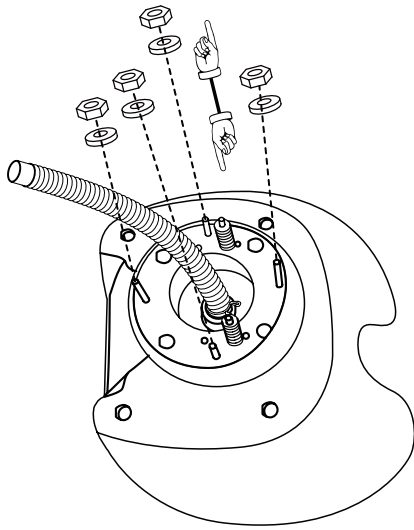


0350

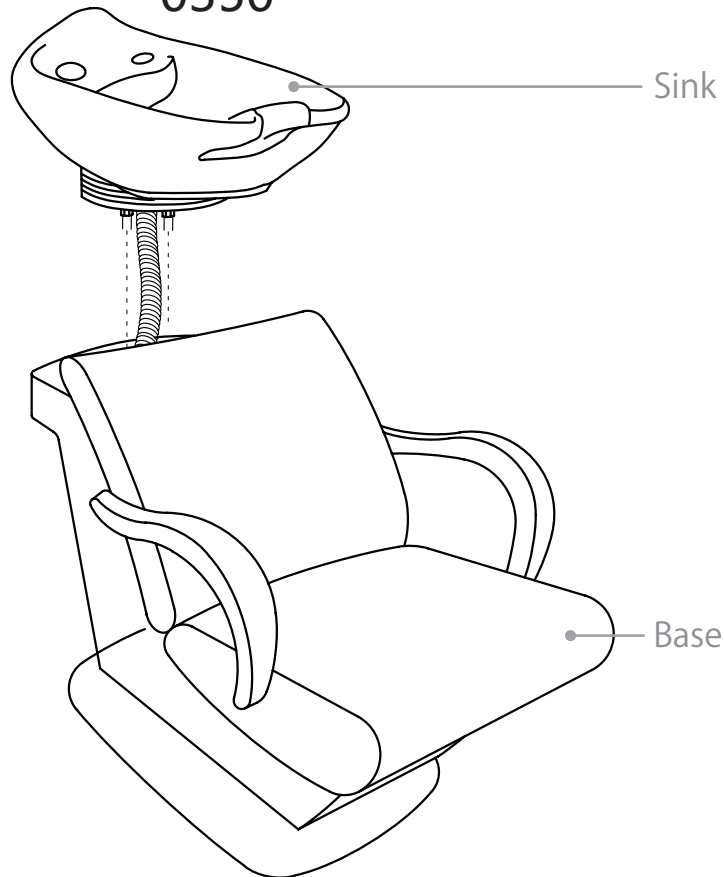 

Front

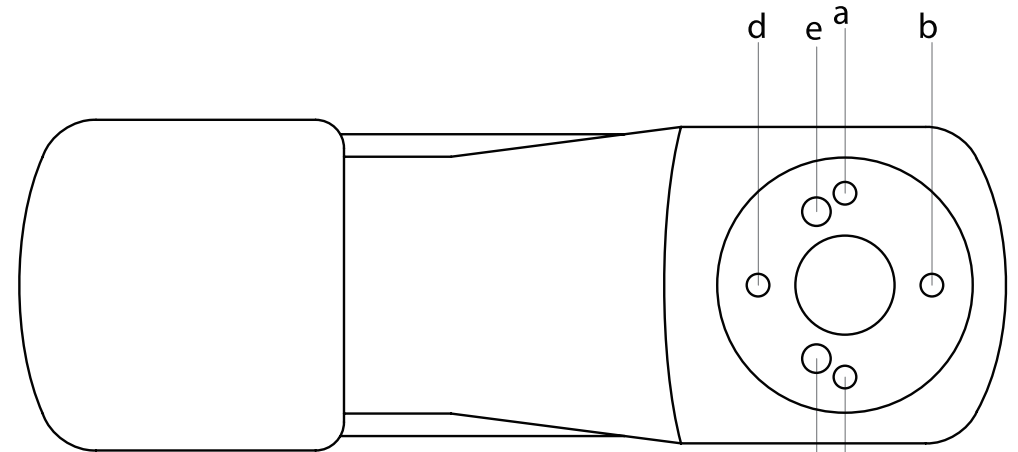 

Topview of Base



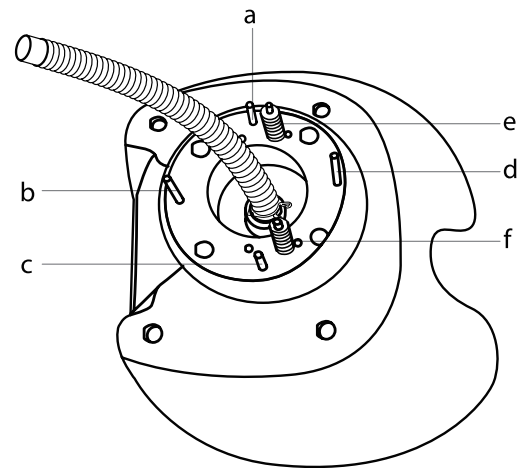 


Sink




Front

   Align the sink to the base as shown in the diagram.

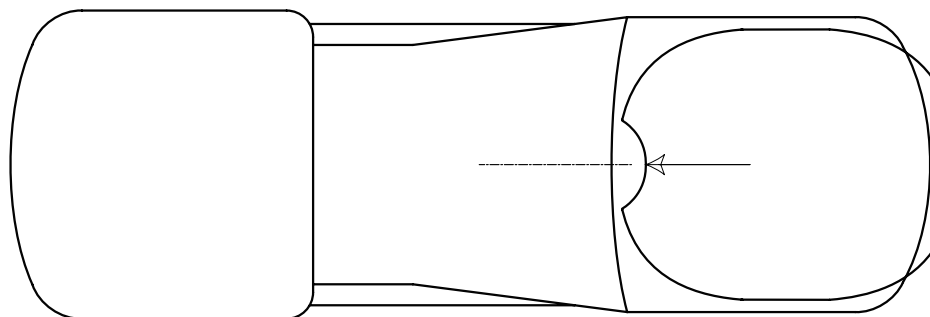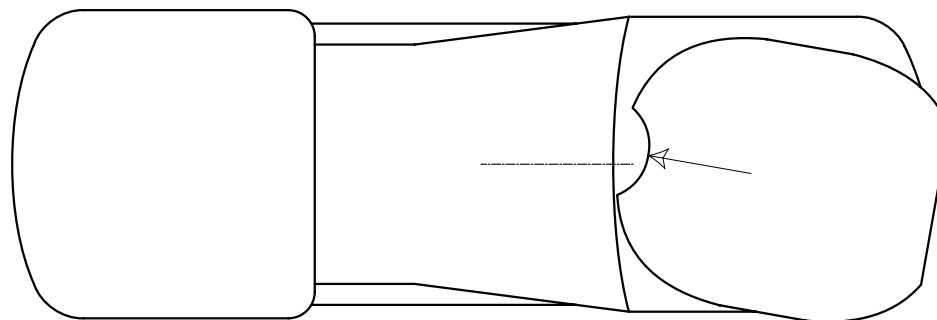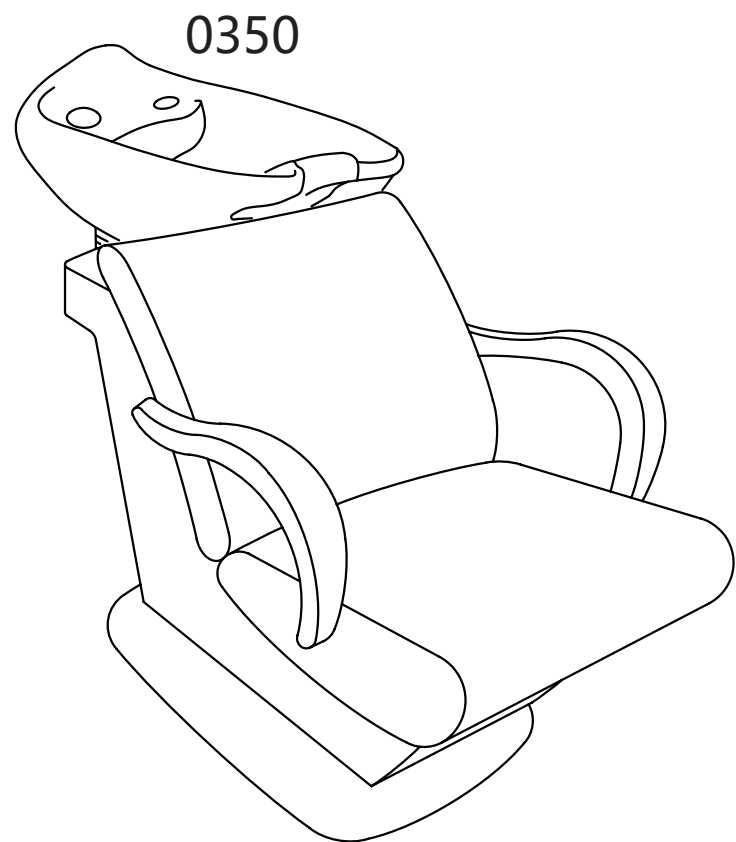

 
Step 3

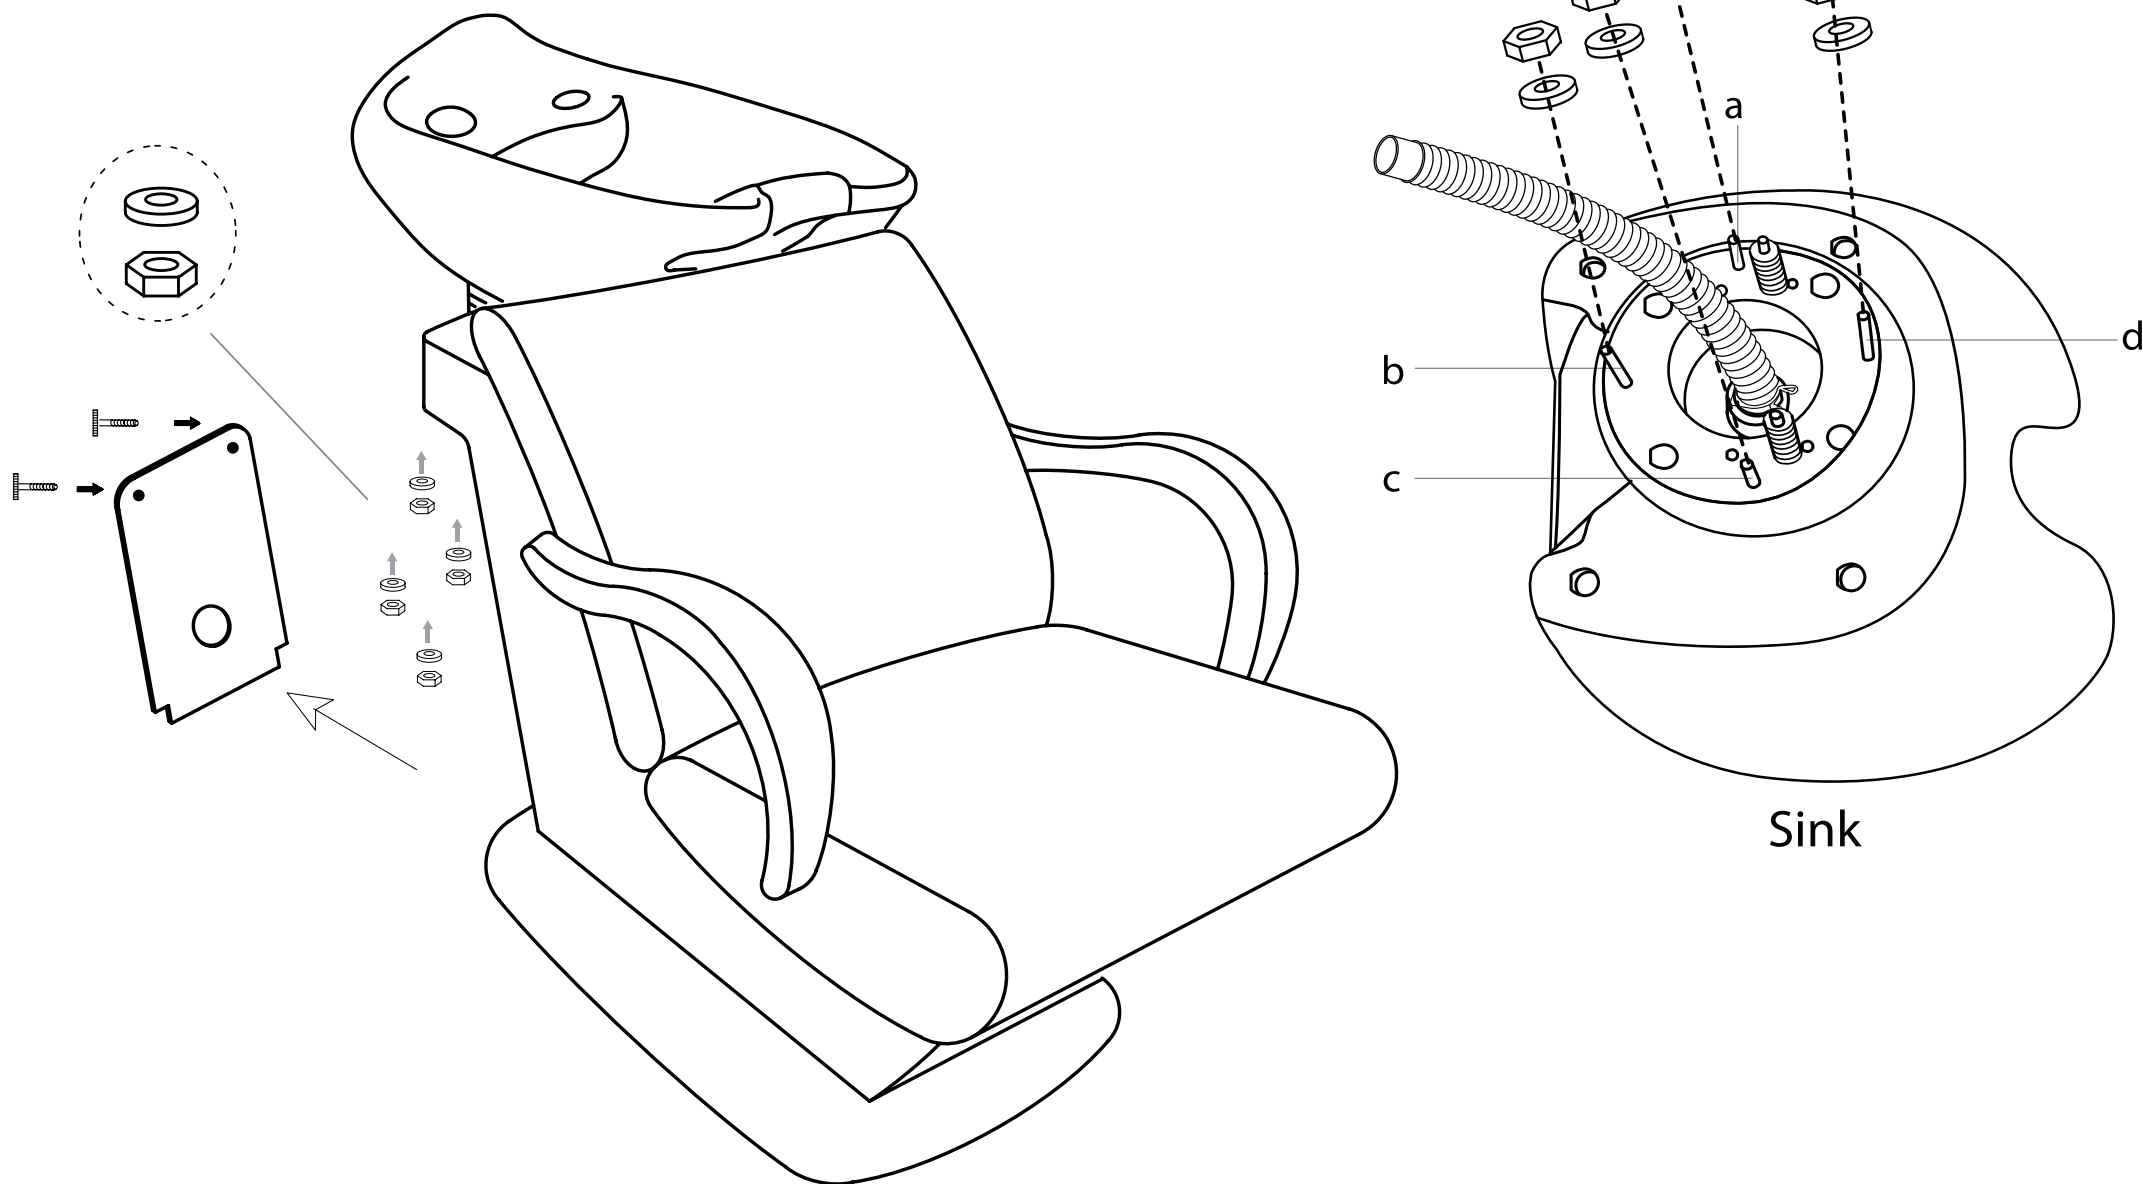


Undo the access panel by twisting clockwise then using the 4* 14mm washers & gaskets provided fasten the sink to the base.

Faucet Set up

 None Vacuum Breaker Sink

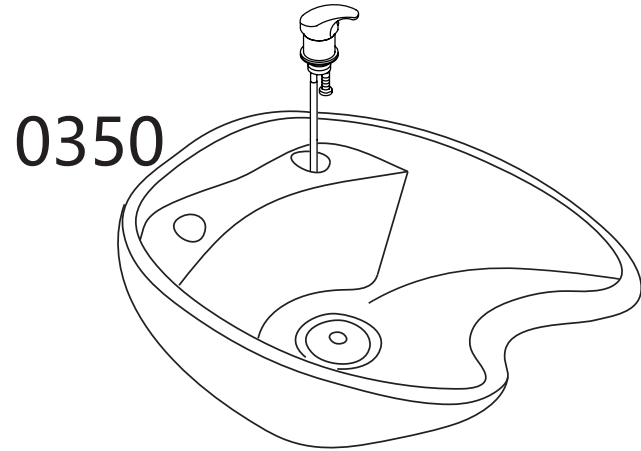

Vacuum Breaker Sink

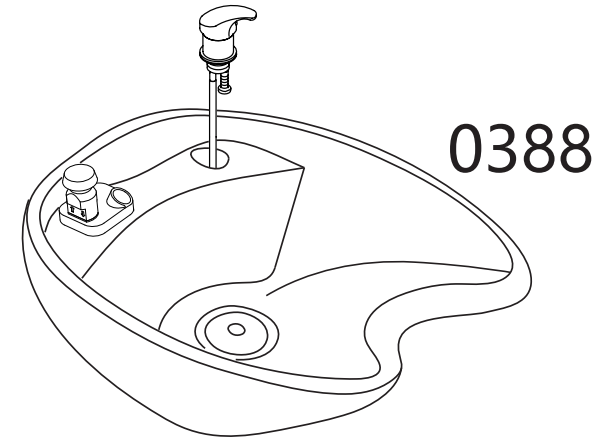 

or

Metal plate

Red water pipe
(connect to Hot water)

Blue water pipe
(connect to Cold water)

Unscrew the metal plate from the faucet

 
 
STEP 1

Sink

Place the faucet on the sink and fasten using the metal plate


STEP 2

Sprayer Set Up None Vacuum Breaker Sink

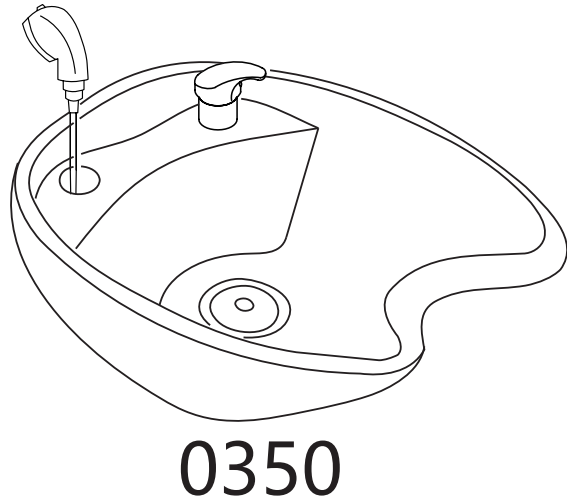


Unscrew the fastener from the sprayerhead holder.

 STEP 1




Fasten the sprayerhead holder to the sink with the plastic fastener.

 STEP 2

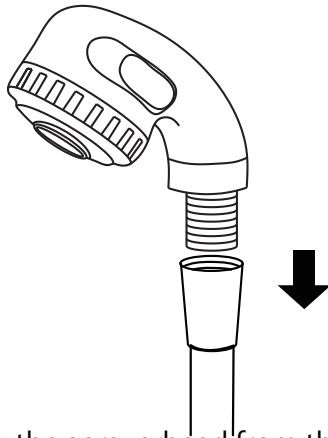


Unscrew the sprayerhead from the sprayer hose.

 STEP 3

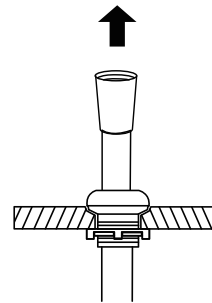


Place the sprayer hose from underneath through the sprayerhead holder and fasten the sprayerhead to the sprayer hose.

 
STEP 4

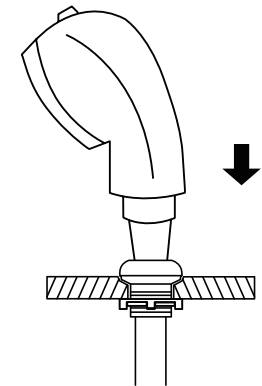


Sprayer Set Up Vacuum Breaker Sink

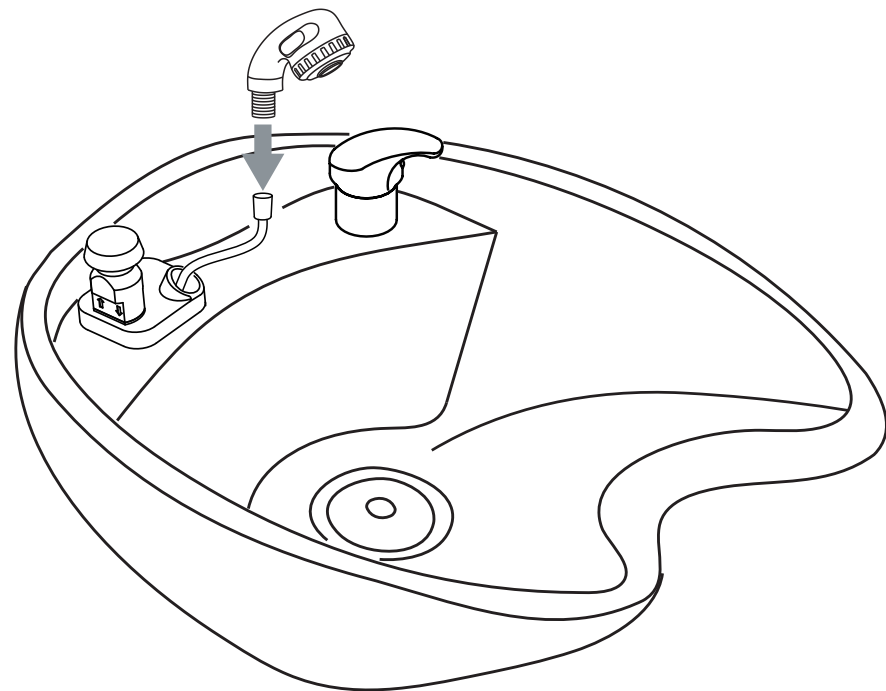 

0388

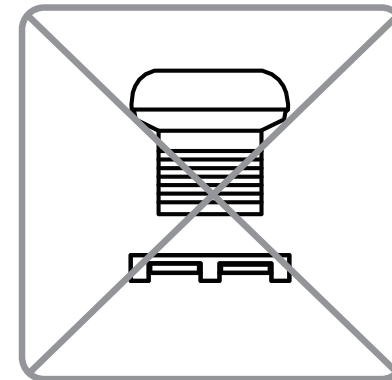 


no need

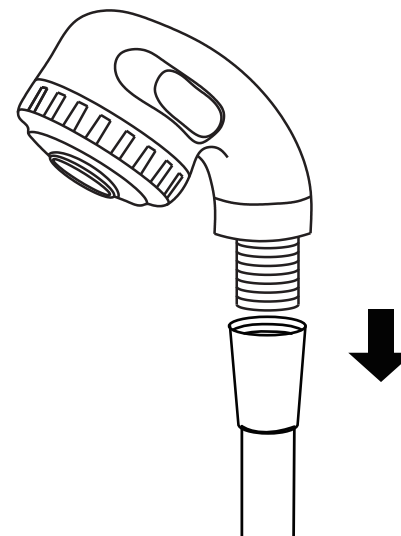 


Unscrew the sprayerhead from the sprayer hose.

 None Vacuum Breaker Sink

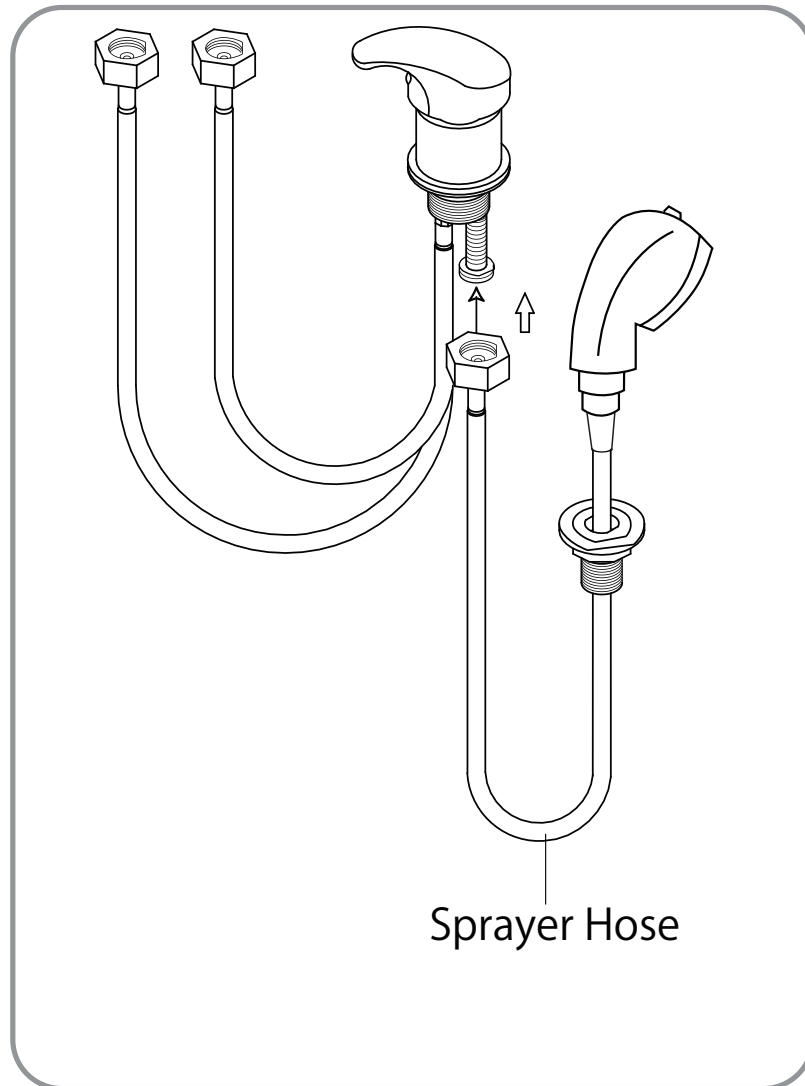


or

 Vacuum Breaker Sink

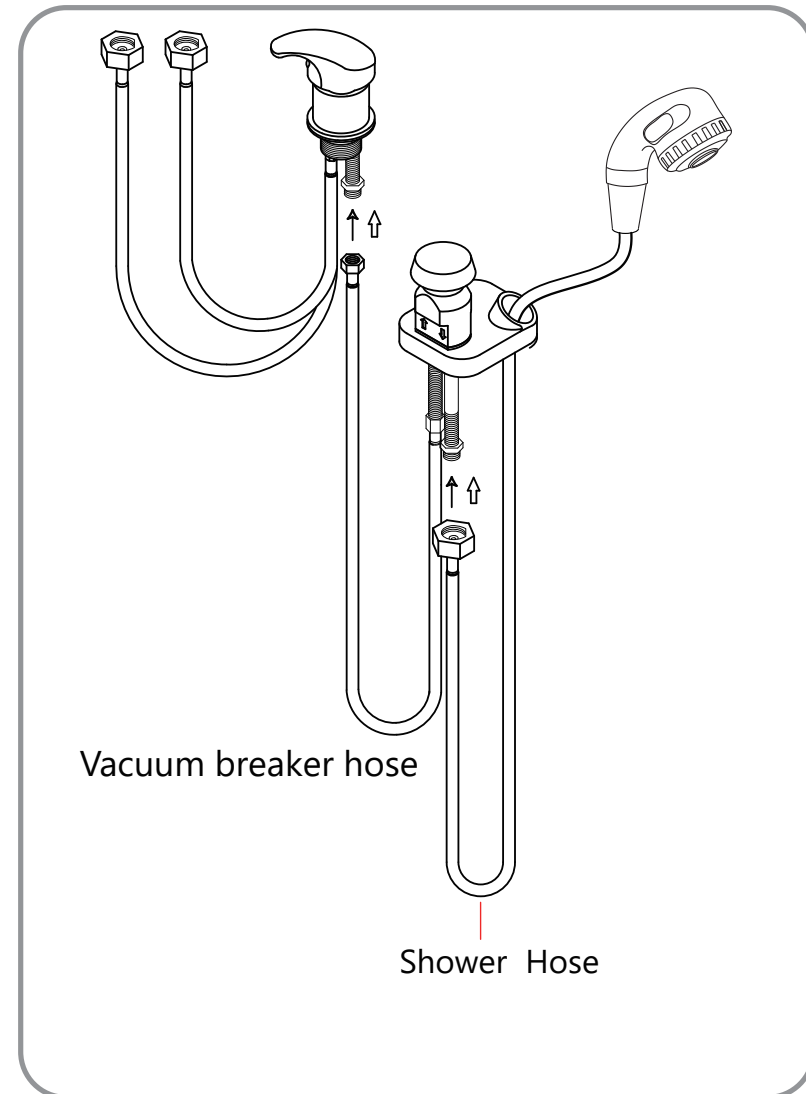


Plumbing setup:

 *removable back panel to route both water supply lines and make all connections.

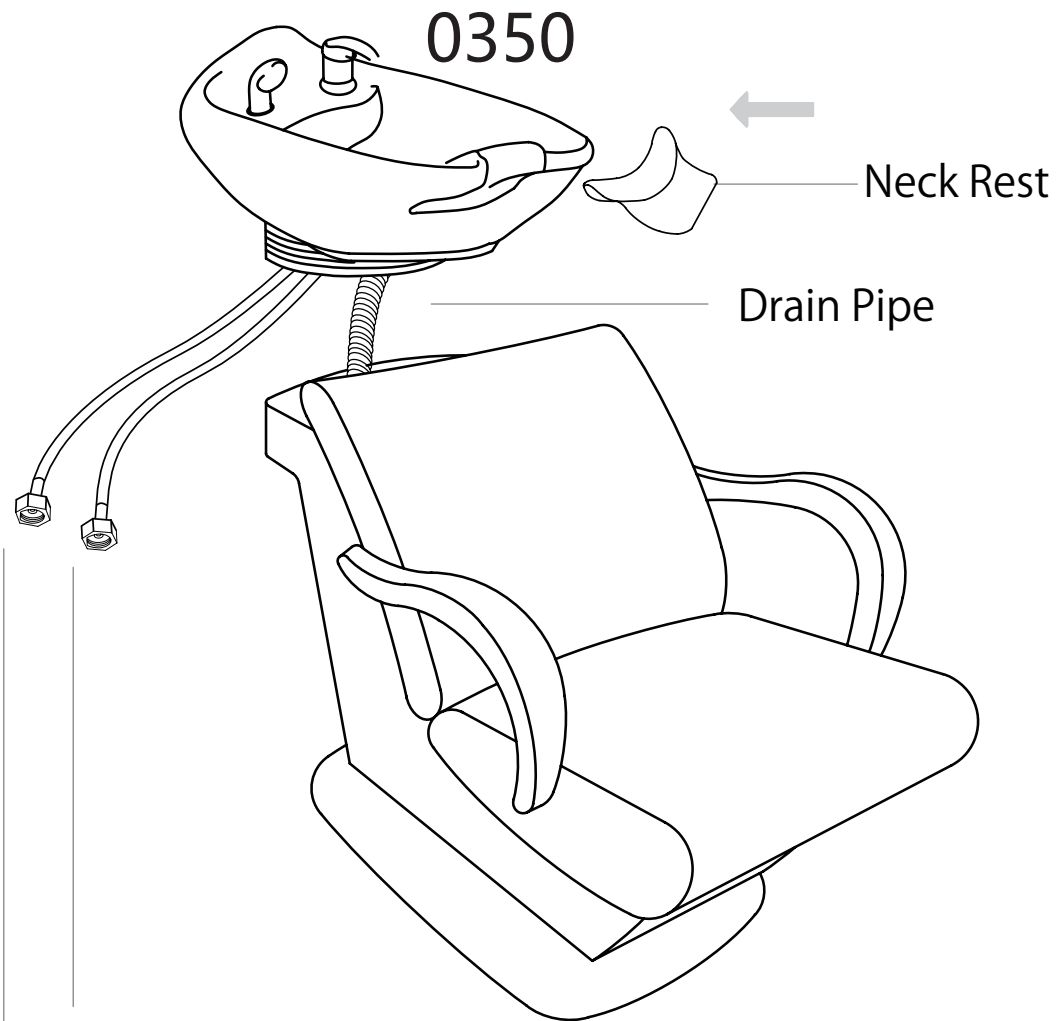

Blue water pipe
(connect to cold water)

 
Red water pipe
(connect to cold water)

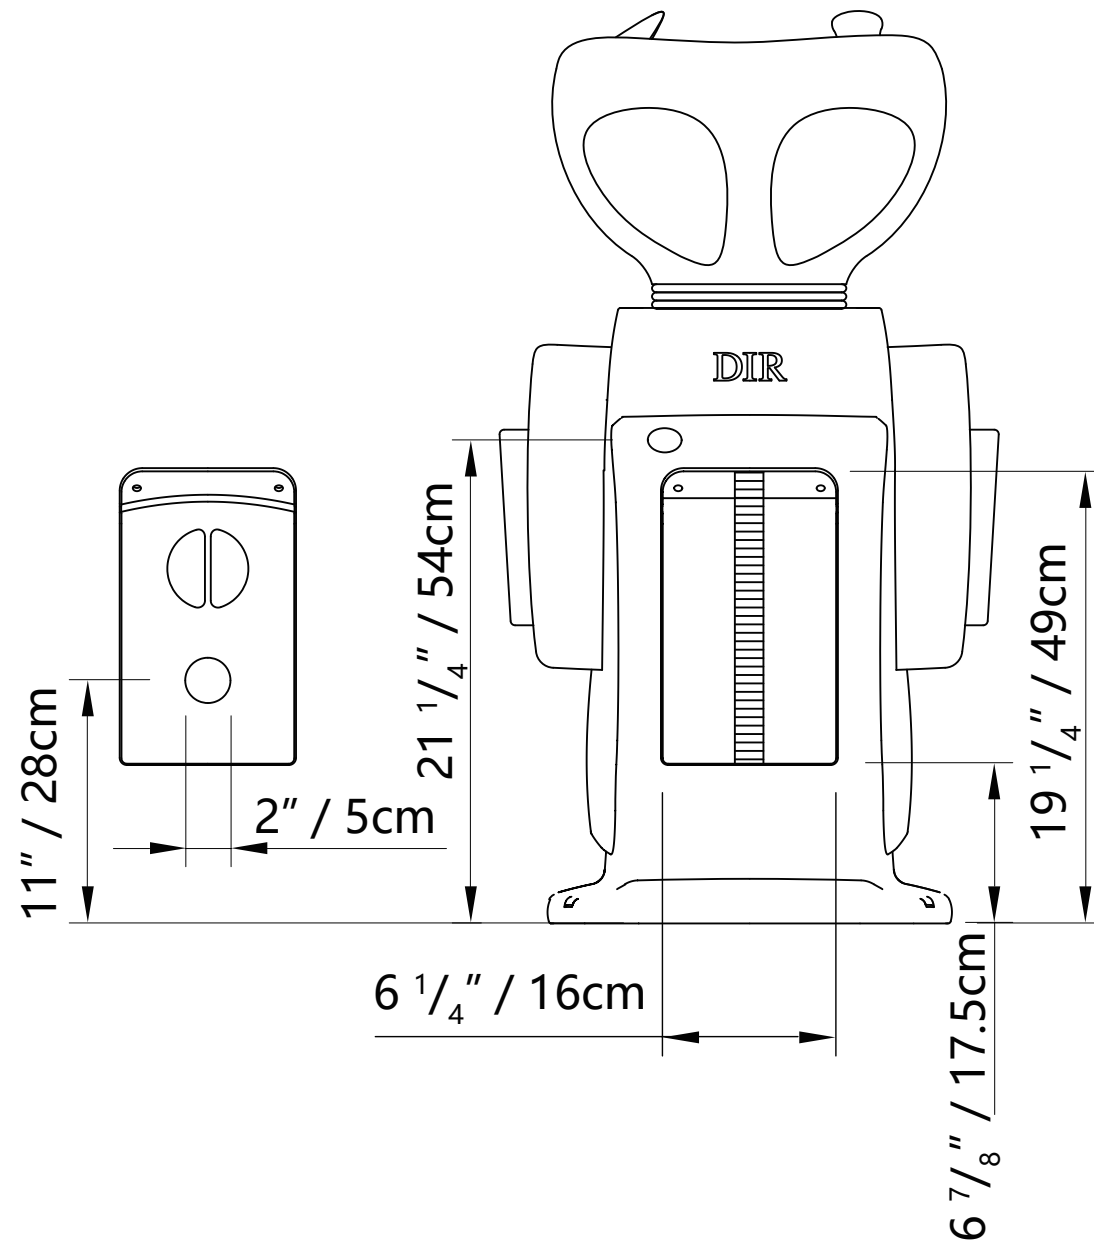

Floor plumbing setup:


All connection pipes are enclosed within the base unit.

 Water supply lines are routed into the unit via circle opening on the back of the base.

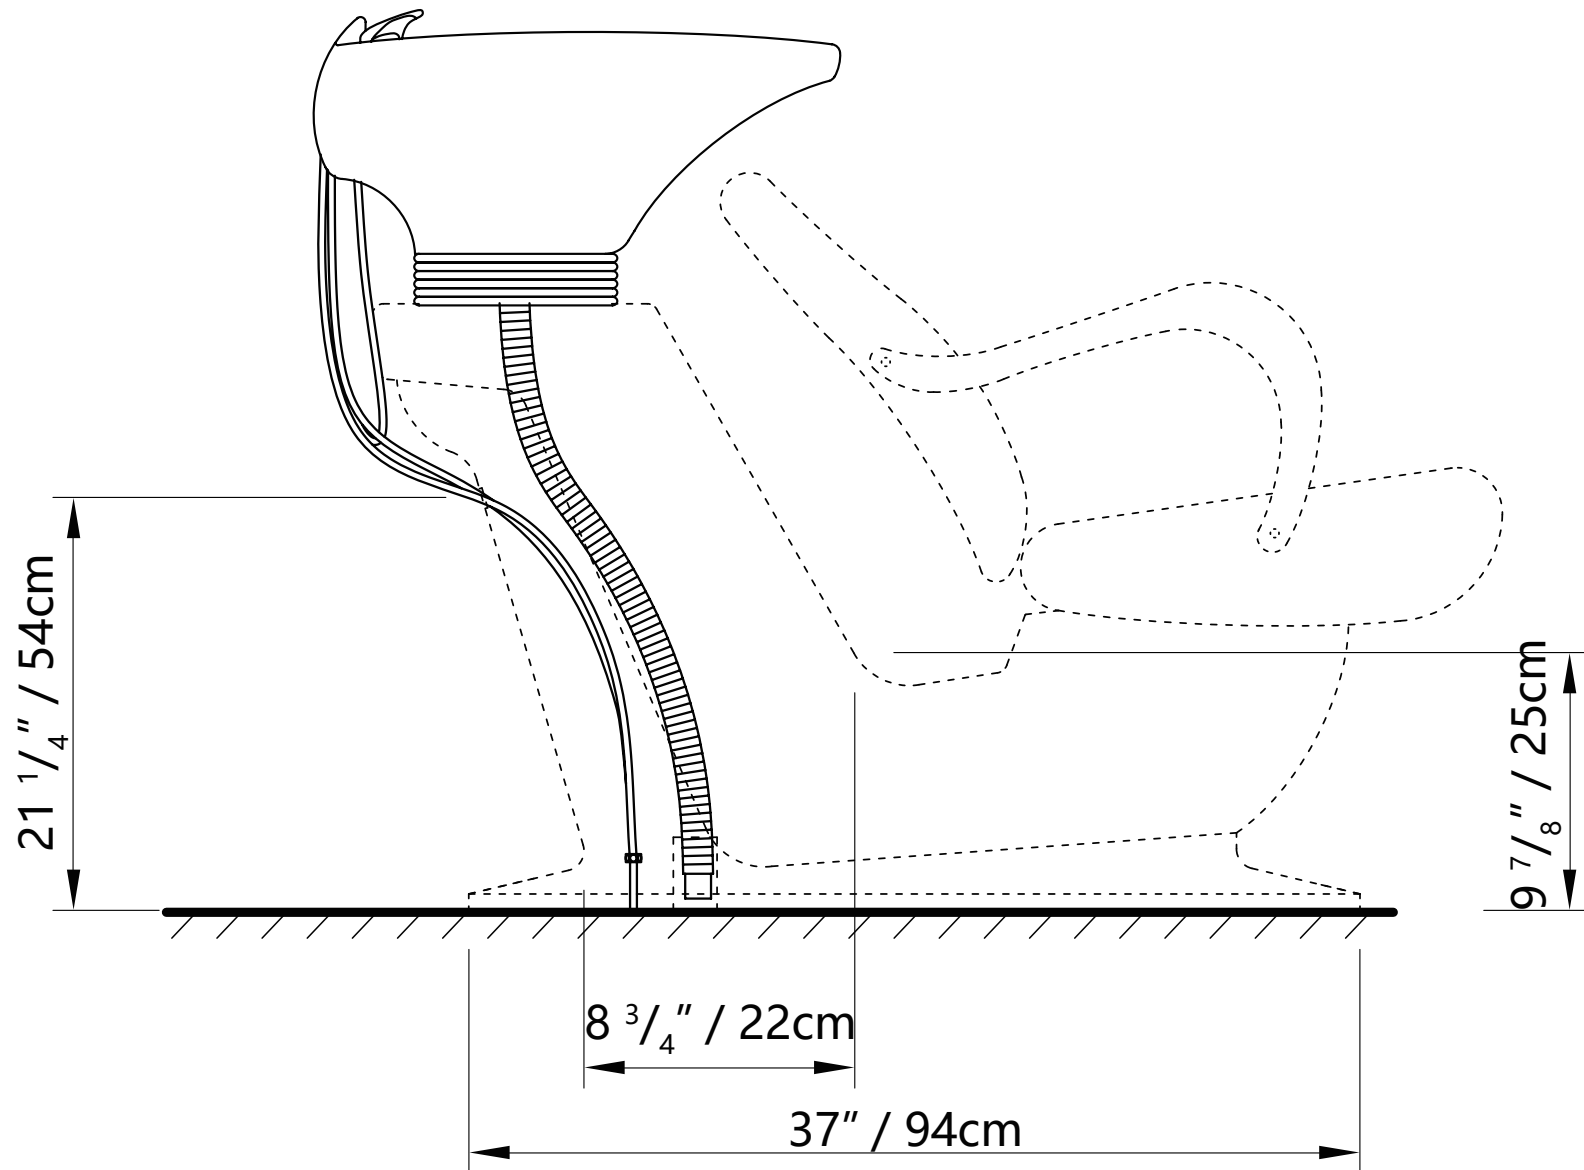



Wall plumbing setup:

 Circle opening on removable back for drain pipe exit

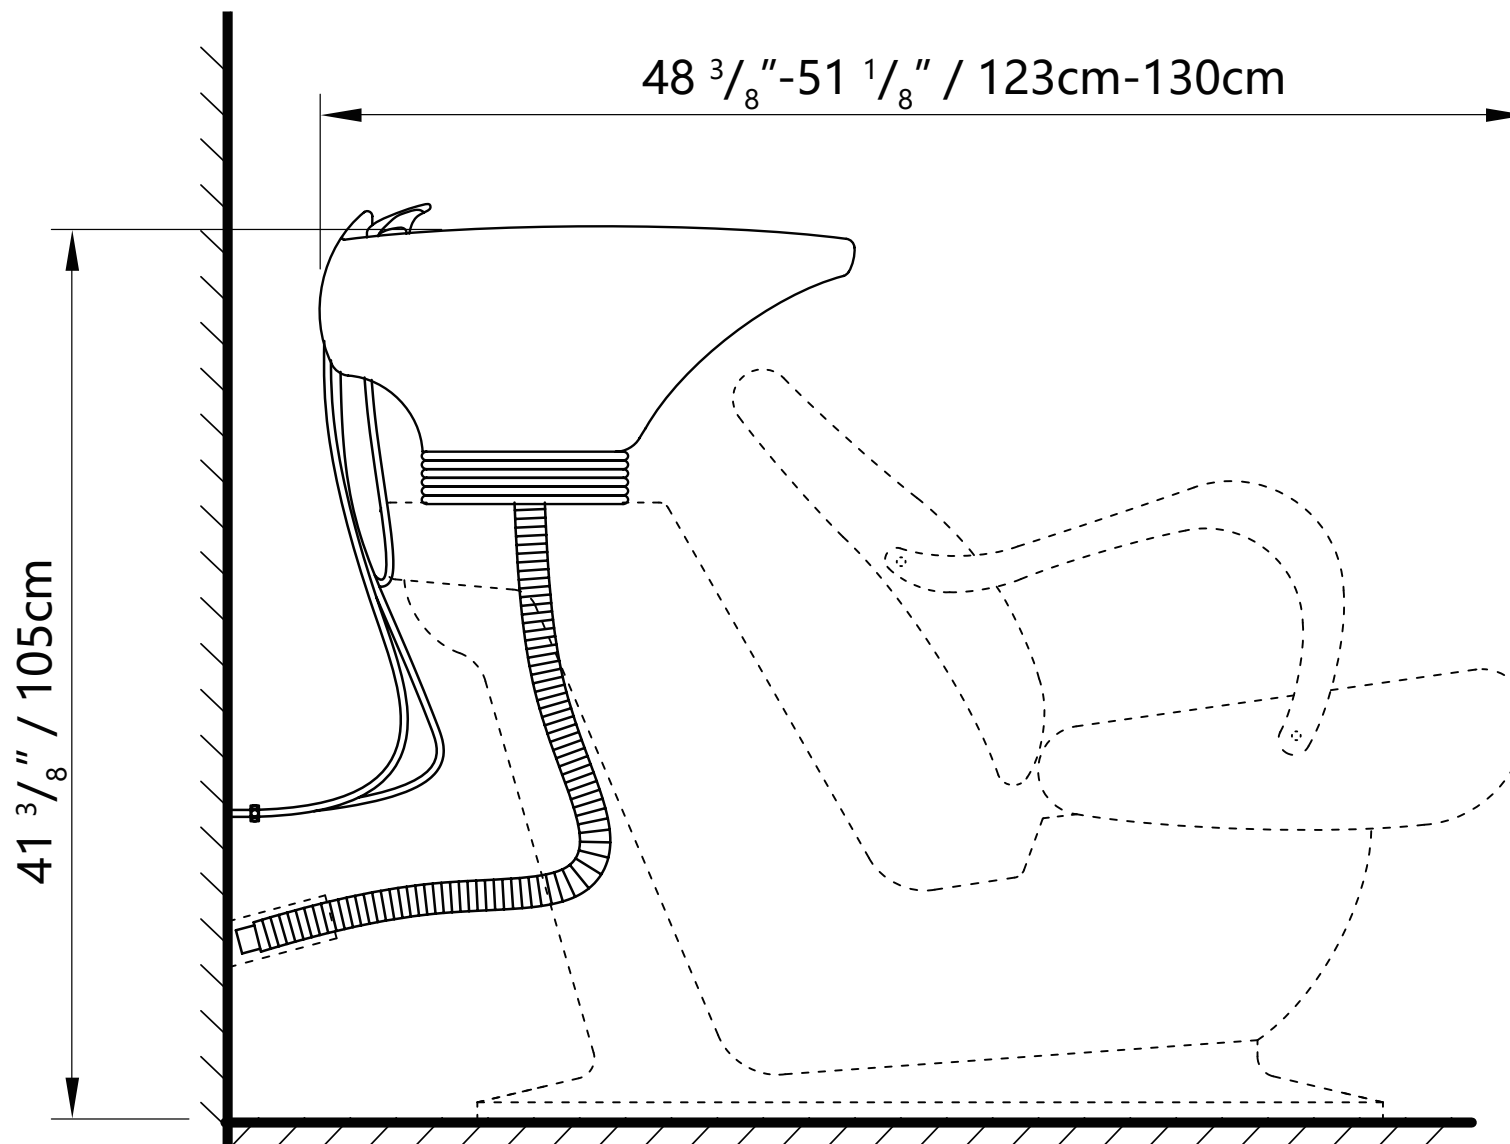

Please leave minimum $7 \frac{7}{8}'' / 20\text{cm}$ of space measuring from finished wall to the back of the sink to allow sinks tilting position.

  
Secure the backwash on the floor by the provided floor anchors.

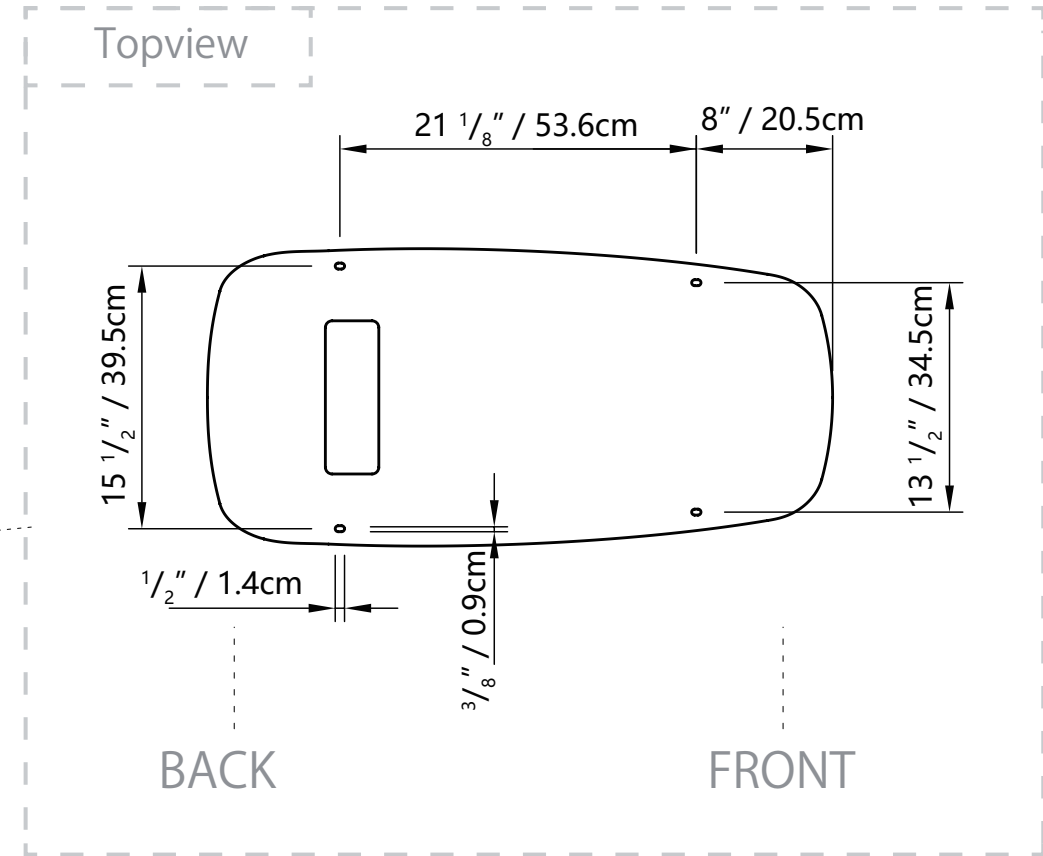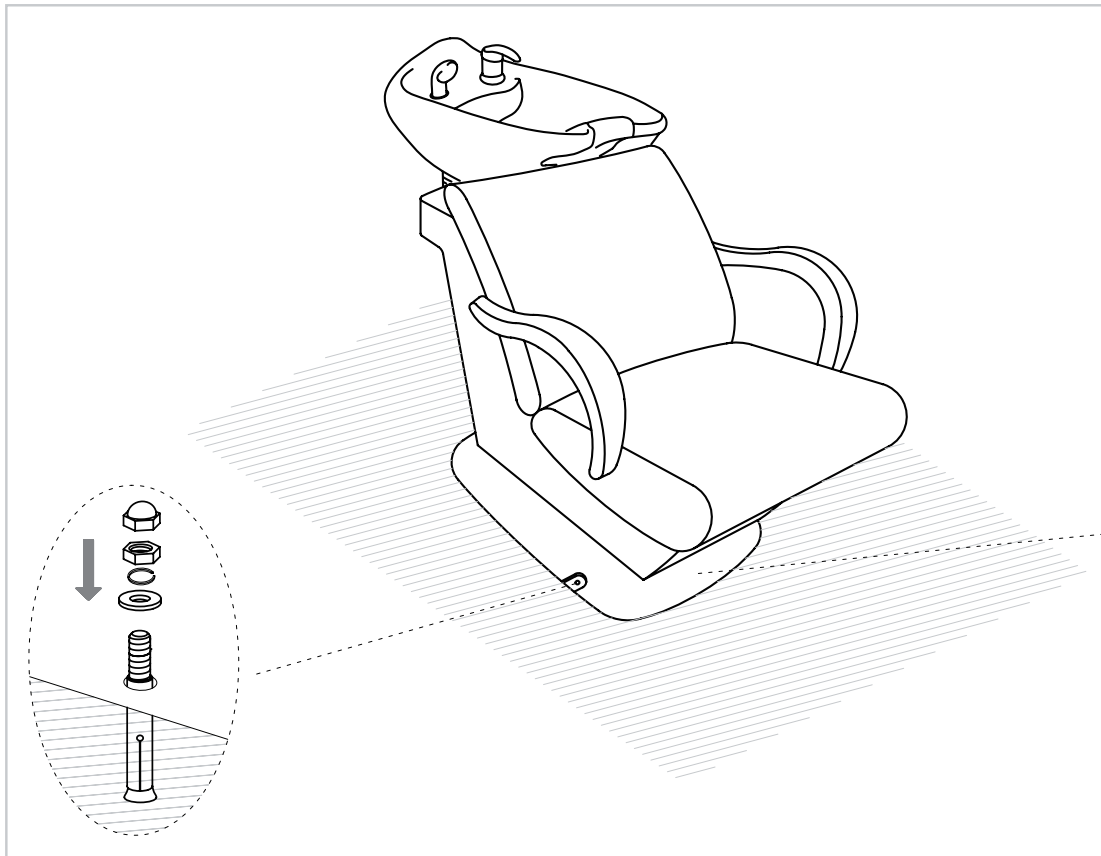


Product care



 
Brush away excess hair

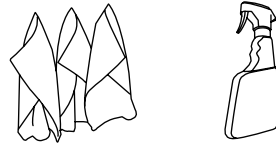

 Clean surface with damp cloth or use simple soap & water solution.

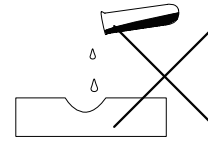

 Avoid using corrosive cleaning agents such as bleaches.

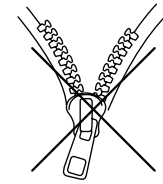

Do not remove upholstery for cleaning

Warranty

The warranty period is one year. DIR warrants to you, the original buyer, that goods shall be free of defects in material and/or workmanship attributable to manufacture for one year from date of receipt of product. Damage resulting from improper handling after merchandise is received, or from exposure to weather or extreme atmospheric conditions is not covered by the warranty. For any other information please contact our support team:

DIR BIRMINGHAM

66 Rea Street South
Birmingham
B5 6LB
UK

Tel:
+44(0)121 6434777

Email:
dирsalon@gmail.com

DIR LONDON

Unit 1 River Road
Business Park
33 River Road, Barking
Greater London
IG11 0DA
UK

Tel:
+44(0)20 8591 9310

Email:
dирsalon@gmail.com

DIR NEW YORK

575 Underhill Blvd.
Suite 170
Syosset, NY 11791
USA

Tel:
+1 (718)628-6668
+1 (800)728-2008

Email:
sales@dирsalonfurniture.com

DIR IRELAND

Unit 20, Goldenbridge Ind.
Estate Tyrconnell Road
Inchicore
Dublin 8
Republic of Ireland

Phone:
+353 (1) 429 7969

Email:
sales.ireland@dirgroup.ie