

CLEANING & MAINTENANCE

1. Turn OFF the unit by using the power switch.
2. Unplug the cord from the power outlet.
3. Wait for contents to cool before handling. Contents may be hot. Remove the wire basket and towels. Set the wire basket aside to dry.
4. With a soft cloth, wipe down the internal surfaces. Do not use harsh chemicals or abrasives. To clean the exterior, use a soft cloth and mild soap.
5. Pull the drip tray forward and empty contents. Set the drip tray aside to dry.

REPLACING THE UV BULB

1. Turn off the unit by using the power switch.
2. Unplug the cord from the power outlet.
3. Screw off the faulted UV bulb.
4. Screw on a new UV bulb, recommended wave length 254nm (UVC)

CAUTION

INTERNAL SURFACES, WIRE BASKETS, TOWELS AND STEAM MAY BE HOT. USE EXTREME CAUTION WHEN REMOVING HOT TOWELS OR BASKETS. ALWAYS USE PROTECTIVE HEAT RESISTANT GLOVES OR MITTS TO AVOID STEAM OR OTHER BURNS. FAILURE TO HEED WARNINGS MAY RESULT IN HARM OR SERIOUS INJURY.

CAUTION: TO AVOID ELECTRICAL SHOCK, DO NOT IMMERSE IN WATER.

CAUTION: To reduce the risk of electrical shock, do not open covers. No user serviceable parts inside. Refer service to a qualified service personnel.

(Users save, show it to the maintenance point of repair)

Product name:

Model:

Place of origin:

Warranty period:

Invoice number:

Date of purchase:

Maintenance records

Repair date:

Date of inspection:


Failure, maintenance, handling of:

Maintenance units:

Repairer's signature:

   Made in China

User's Manual

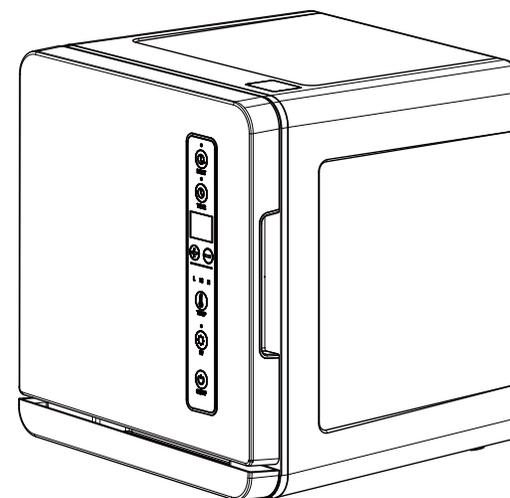


DIGITAL TOWEL WARMER
SALON AND SPA PROFESSIONAL

1
year
limited
warranty

About this Manual

Before installing and using this unit, please read this manual carefully. Be sure to keep it available for later reference.

Name of product component

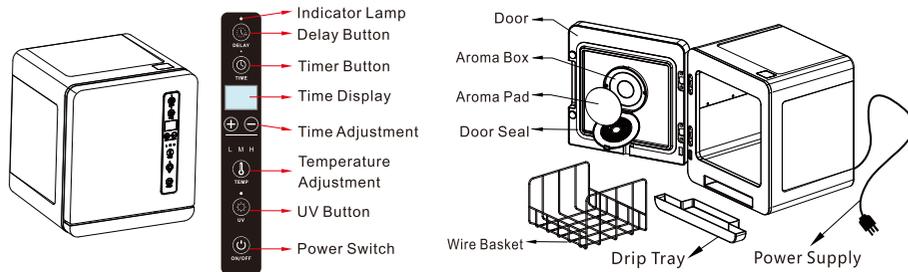

Specification Parameters

Rated Voltage	120V	220V-240V
Rated Power Inputs	160W	
Rated Frequency	60Hz / 50Hz	
Safety Device	Thermal Fuse	
Capacity	8 L	
Heating Temperature	L:122°F-131°F / M:140°F-149°F / H:158°F-167°F	
Overall Dimensions	10.2x9.9x11.3 inches	

UV Bulb (if applicable)

Power	3W
Radiation Type	UV-C, wave length 254nm

Important safeguards

READ ALL INSTRUCTIONS BEFORE USING

Caution and proper procedures must be practiced at all times when using electrical appliance. When using electrical appliances, basic safety precautions should always be followed, including the following:

- Do not use appliance for other than intended use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. No user serviceable parts inside, Return appliance to the nearest authorized service facility information on examination, repair, or adjustment.
- The use of accessories and/or attachments not recommended or sold by the appliance manufacturer may cause injuries.
- Do not use outdoors. This appliance is intended for indoor use only.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Close supervision is necessary when any appliance is used by or near children.
- Do not leave the appliance unattended when switched on.
- Extreme caution must be used when moving an appliance containing hot liquids.

WARNING

TO PREVENT ELECTRICAL SHOCK, UNPLUG BEFORE CLEANING.

- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance is operating.
- If using an extension cord, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.

CAUTION

TO AVOID ELECTRICAL SHOCK, DO NOT IMMERSE IN WATER.

CAUTION

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT OPEN COVERS. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Operating Instructions

PREPARATION

1. Run towels briefly under water.
2. Wring out excess water from the towels. Towels should be damp, not soaked. You may need to wring out several times.
3. Fold or roll towel and place towels in the wire basket. Do not overload the wire basket or directly place towels into the towel warmer.
4. Insert the basket and towels into the towel warmer.
5. Close the door firmly.
6. **Start heating**
Press the "ON/OFF" button, the unit enters default working mode, and starts heating up.
7. **Time Setting**
Press the "TIME" button, the time display will flash, press "+" or "-" buttons to set the working time. Each press will increase or decrease 1 hour. The time range will be 1-12 hours. Once the working time is set, the unit will start heating in 3 seconds
8. **Appointment**
Press the "DELAY" button in standby mode, the time display will flash. Press the "+" or "-" buttons to set desired appointment time. Each press will increase or decrease 1 hour. The default appointment time is 12, which means the unit will start working after 12 hours.
9. **Temperature**
Press the "TEMP" button, the indicator light for "M" will illuminate, which means High Temperature. If you need to adjust the temperature, press the "TEMP" button to "M" which means Medium Temperature, or to "L" which means Low Temperature.
10. **UV Function (if applicable)**
Press the "UV" button to turn on or turn off the UV lamp.
By default, the UV lamp will be turned on when the unit starts to heat up.
11. **Turn Off**
If you want to turn off the unit during its working mode, press and hold the "ON/OFF" button for 2 seconds, the unit will stop heating and return to standby mode.