


Components

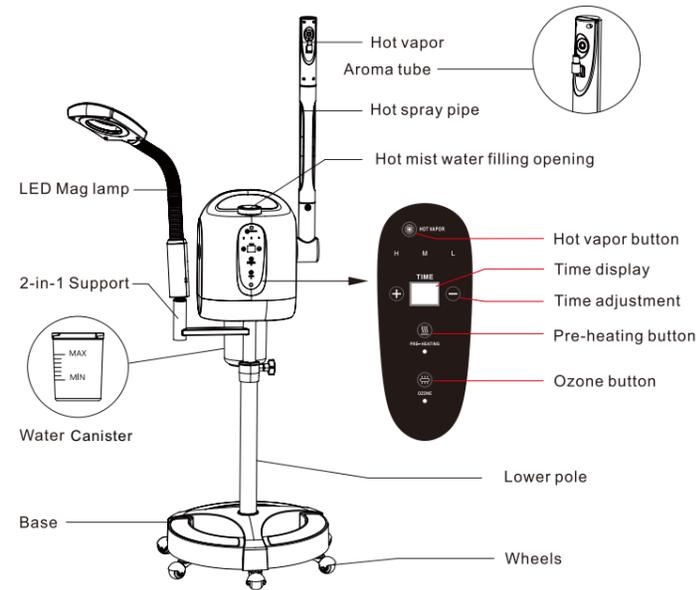


PART LIST

A:Main body	B:LED Mag lamp	C:Hot spray pipe	D:2-in-1 Support	E:Lower pole
1PC	1PC	1PC	1PC	1PC
F:Base	G:Wheels	H:Bolt	I:Washer&Bolt	J:Tool
1PC	6PCS	1PCS	1PC	1PC

|01

INSTALLATION

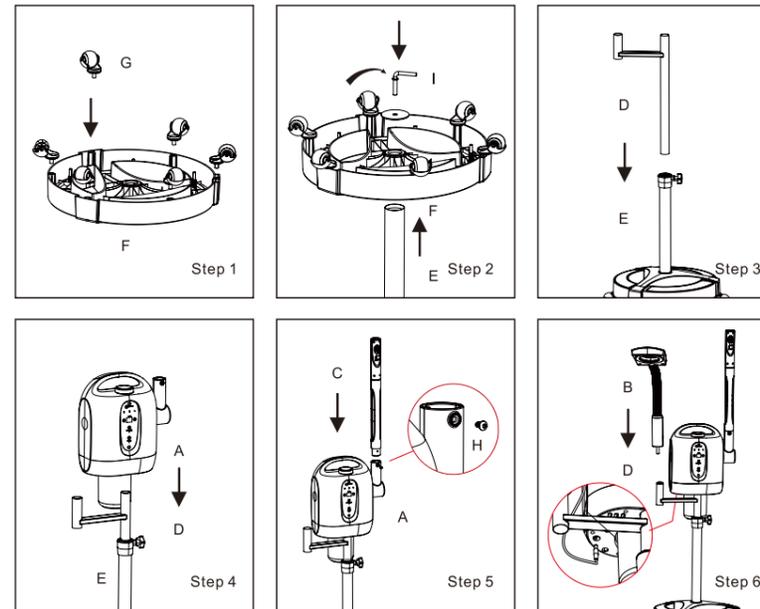


WARNING

- Do not place the device upside down or tilt it when it is in operation; use it only on a level surface.
- Do not start the device without water in the water canister. Doing so may cause damages to the unit.
- Do not add any additives such as essential oils into the water. Doing so may cause damages to the unit or to the user.
- Clean the water canister frequently. Make sure to turn off the power and unplug before taking off the water canister and allow time for the unit to completely cool.
- Do not touch the water canister when it is hot.
- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Do not use an extension cord with this appliance.
- Never hold this facial steamer close to your face in one position as this may cause scalding.
- Make sure to drain the water if the device is left not in use for a long time.
- This device has been thoroughly tested and examined. In case of any malfunction, please contact your local distributors. Non-authorized repair or tampering will invalidate the warranty.

|02

OPERATION


HOT VAPOR OPERATION

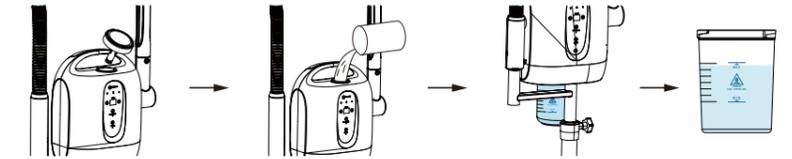

Fill the water canister through the top opening with clean water. Make sure the water level is between the MAX and MIN marks.


- Assemble the machine with reference to the above diagram.
- Find a comfortable location for using the facial steamer, adjust the height to desired level.
- Connect to power and the facial steamer will be in standby mode.
- Press the "HOT VAPOR" button, the indicator light for "H" will illuminate, which means High Hot vapor, If you need to adjust the Hot vapor, press the "HOT VAPOR" button to "M" which means Medium Hot vapor (L=Low, M=Medium, H=High).
- By default, the time display will flash 30 minutes, press "+" or "-" buttons to set the working time. Each press will increase or decrease 5 minutes. The time range will be 5-60 minutes. Once the working time is set, the unit will start working in 3 seconds. The steam will start to spray in about 5 minutes.
- Press the "PRE-HEATING" button, By default, the time display will flash 60 minutes, press "+" or "-" buttons to set the working time. Each press will increase or decrease 5 minutes. the time range will be 5-90 minutes. Once the working time is set, the unit will start working. Hot steam sprays in 20 seconds after pre-heated.
- By default, the OZONE generator will start to work and the OZONE button will light up in Blue. Press the "OZONE" button to turn on or turn off the OZONE.

LED Magnifying Lamp

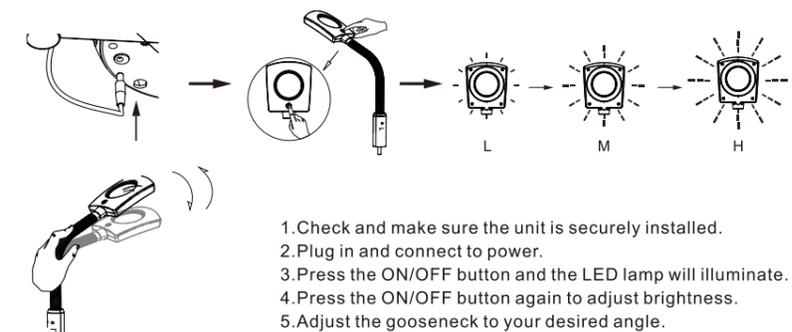

- Check and make sure the unit is securely installed.
- Plug in and connect to power.
- Press the ON/OFF button and the LED lamp will illuminate.
- Press the ON/OFF button again to adjust brightness.
- Adjust the gooseneck to your desired angle.

|03

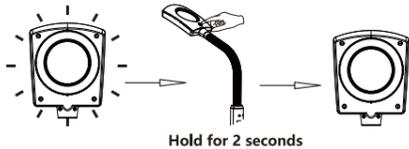

To switch off the LED lamp, press the ON/OFF button and hold for 2 seconds.


Hold for 2 seconds

MAINTAINING

Clean the water canister every 1 or 2 months depending on frequency of usage.

Facial Steamer

- 1: Unplug the unit and make sure the water canister is NOT HOT.
- 2: Remove the water canister from the main body by turning it counterclockwise.
- 3: Wash the water canister with clean water. DO NOT use corrosive detergents.
- 4: Install the water canister to the main body by turning it clock wise.

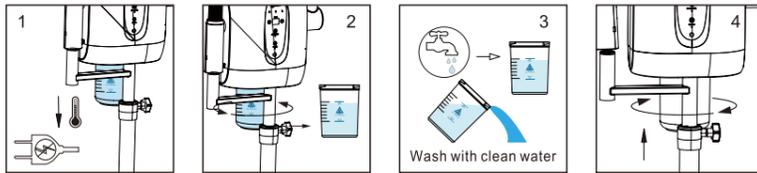

If the heating pipe is incrustated, clean it with 5% vinegar solution.

LED Magnifying Lamp

1. Unplug the unit before maintaining;
2. Clean the glass lens with a soft alcohol wipe, or soft fabric with mild detergents.


DO NOT use coarse fabrics to clean the glass lense. doing so many scratch the lens and reduce the transparency



TYPES OF WATER TO BE USED

This facial steamer works with almost all types of clean water, such as purified water, distilled water, mineral water, tap water and etc. However, for the best performance and proper maintaining of this unit, please use purified water or distilled water.

WARNING: Please do not add any additives or essential oils into the water. Doing so may damage the unit or cause injure to users.

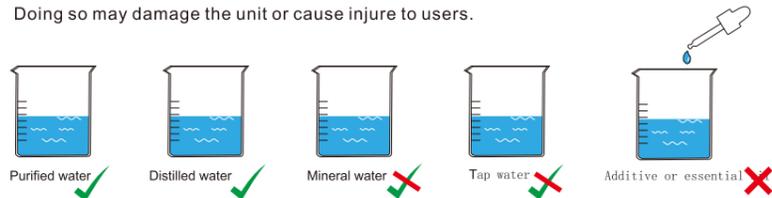

WARRANTY CARD

Owner Warranty certificate

(Users save, show it to the maintenance point of repair)

Product name:	Warranty period:
Model:	Invoice number:
Place of origin:	Date of purchase:

Maintenance records

Repair date:	Date of inspection:
Failure, maintenance, handling of:	
Maintenance units:	Repairer's signature:

Facial Steamer


Rated Voltage : 120V 50/60Hz
 220V - 240V 50/60Hz
 Rated Power : 750 W

CE RoHS Made in China

LED Mag Lamp

Voltage : 24VDC
 Power : 9.5W (66 Led Bulbs)
 Brightness : Adjustable 1000Lx-1600LX
 Color Temperature : 8500K
 Magnifying Lense : X 5

Instruction Manual

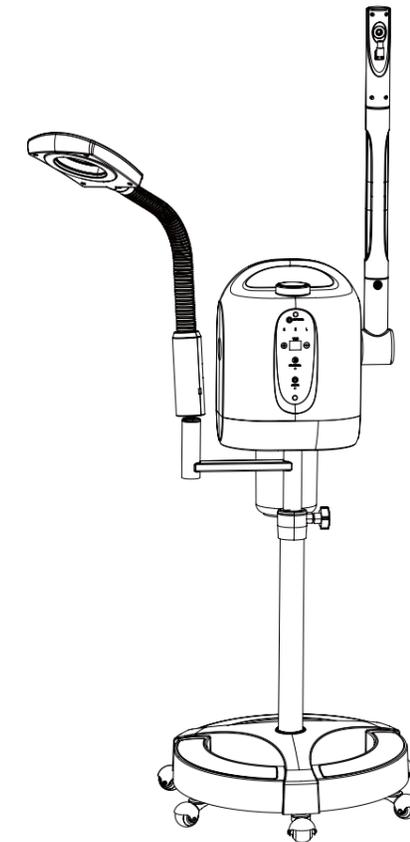

2-in-1 Facial Steamer + Magnifying Lamp

State-of-the-art design for super creative spa professionals

