


DIR[®]

Sydney II

8228-2G

INSTRUCTION MANUAL

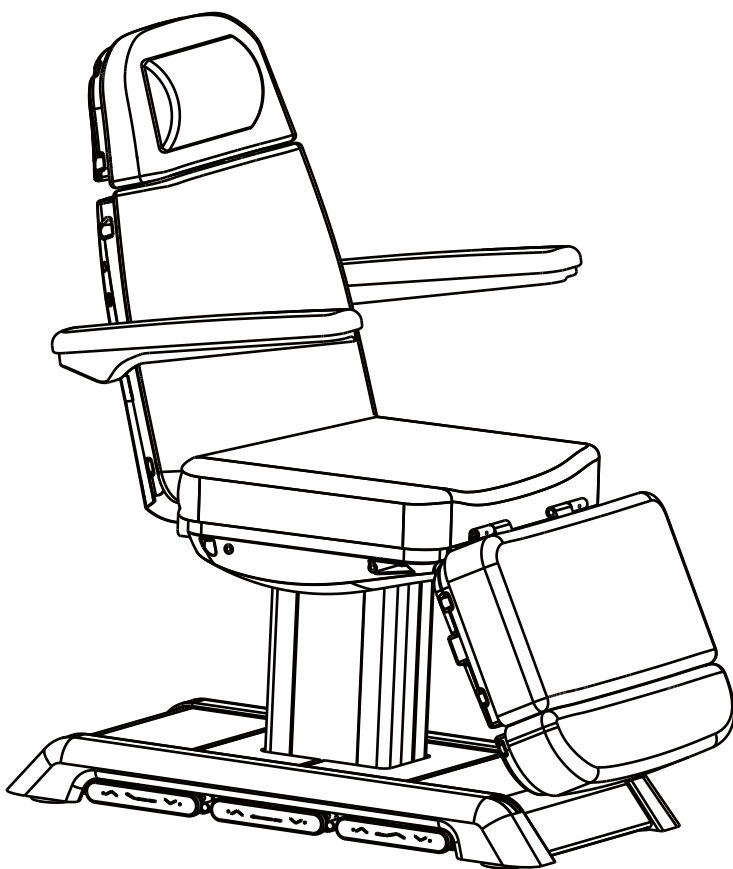

1. About This Manual

This manual shall only be used for the reference of operation of this particular model. If the manual is used for other purposes, we will not undertake any according consequences and responsibility.


All information of this manual shall be protected by copyright and shall not be copied and translated in any part of this specification without the written consent of manufacturer.

2. Warning

- Power supply must be cut off when changing electrical components or maintaining and cleaning
- The plug must be plugged into an outlet that is properly installed and grounded, to prevent the risk of fire and electric shock.
- Do not stand on this equipment.
- Do not allow children to play with and place the equipment in a place where children can touch. Please adjust the backrest to the highest position when you leave.
- The product should be kept in dry places and away from water, All electrical accessories such as remotes should be kept dry and free of water.
- Please do not place and operate the equipment in places where is painting/coating or supplying oxygen.
- Unless being monitored or instructed by personnel who can be responsible for their personal safety, the people who have physical obstacles, tactile disorders, mental disorders, lack of experience, common sense or children, are not allowed to use the equipment.
- Please contact distributor, service center or related personal with appropriate skill and experience for repairing if the plug is damaged, in case of any danger.
- Operation should be processed by trained professionals.

3. Precautions

- The equipment should be used by an experienced person who must be familiar with the product structure, performance and instructions. And make the regular maintenance work.
- Read this manual carefully before installation, operation and adjustment. And please keep it well.
- This product shall not be used for single side or single point loading work.
- Comply with safety operation rules, do not overload the use of products, to ensure that the product safety protection equipment is complete and reliable, eliminates unsafe factors on time.
- Tighten bolts and nuts regularly to avoid failure caused by loose, sliding, vibration and falling parts.
- During the maintenance, the operator shall not disassemble any parts of the bed at will.
- This product is not allowed to operate when it's with fault. If abnormal phenomenon or abnormal sound is found, it must be stopped for inspection immediately, and work can be resumed after troubleshooting.
- The operator must be familiar with the precautions described in each section of the manual to ensure the safety of person and product.
- This electric beauty bed is equipped with a three-wire power cord. The power cord must be plugged into a three-hole outlet which is properly installed and grounded. This is not only to prevent the risk of electric shock, but also ensure bed work properly.
- Please operate the equipment strictly accordance with the warning label pasted to the products.
- While controlling the lifting of the whole bed, the button must be pressed continuously until the bed in a suitable position.
- Please pay attention that the continuous working times should be Max. 2Min. ON 18Min. OFF, when operating the motor.
- Maintenance should be processed by trained professionals.
- After each treatment, please use neutral reagent to clear the dust, stains on leather or on plastic cover.
- When adjusting the headrest, backrest, seat cushion, footrest or lifting of the whole bed by hand controller or installed foot controller, please keep your hands, feet and head away from the position.
(Please see right picture)

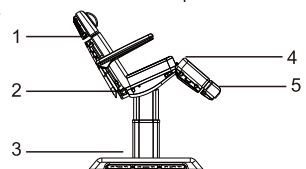

4. Applicable Range

These electric beauty beds are suitable for beauty, massage and manicure treatment.


5. Installation

1. Put the bed to a proper location, according to the overall layout, the daylighting or artificial lightings and operation condition of the salon's or the home. And keep it in the clean, dry and cool environment.
2. Open the packing carton to check if the bed is intact and whether the accessories or spares are complete. Please contact distributor or us if there's any problem.

3. Installation


Place the bed to the proper position. Please note that it is unnecessary to install extra screw on the floor to fasten the bed, because the original design has taken the stability performance into consideration. But please ensure the bed is placed on a firm and flat ground, so as to prevent any accident. If the bed rotates or slant due to rough ground, please adjust the four pieces of plastic feet (M10×30) and nuts (M10) by hexagon open-end wrench, which are fasten on the bottom panel, so as to ensure the bed is stable.

4. Connect the plug of bed with power supply properly. (Details as shown below)

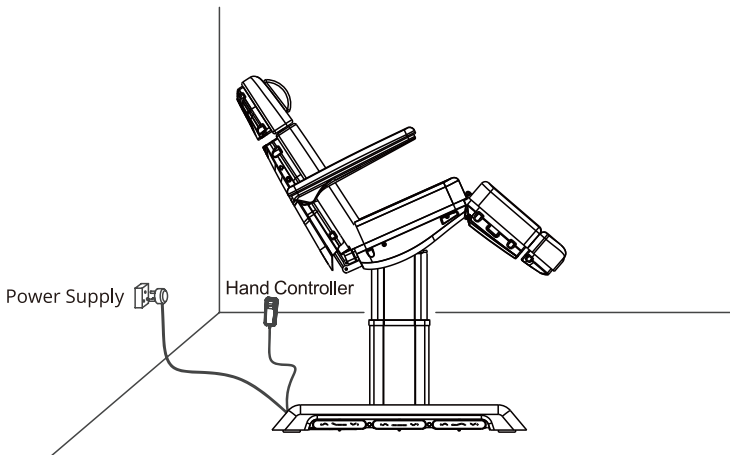



6. Structure of Electric Beauty Bed

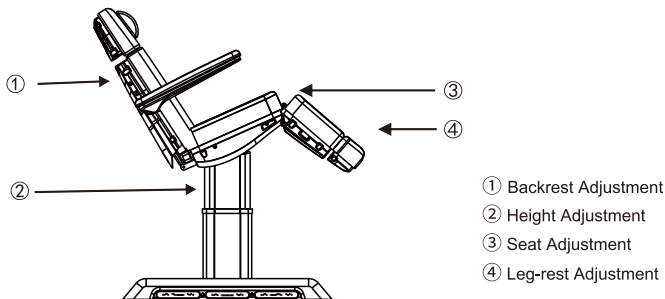- This beauty bed consists of controller box, motor, hardware, plastic parts and leather. Among them, the controller box is controlling the operation of four motors and the band controller.
- This beauty bed includes angle adjustment of the backrest, angle adjustment of the seat cushion, adjustment of the leg-rest and adjustment of the height.
(Details as shown below)




7. Operation Instruction


Standard Configuration

No.	Description	Operation
1	Reset Function 	Press button to reset and return to upright sitting position and leg-rest will be lowered as well.
2	Safe Lock Function 	Press and Hold Safe-Lock button for 3 seconds to activate locking mode (red light comes on). To deactivate simply press and hold again for 3 seconds, the red light will go out.

1.Standard Configuration (Hand Controller)

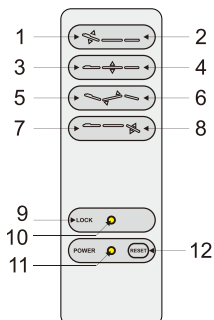





2.Standard Configuration (Built-in Foot Controller)

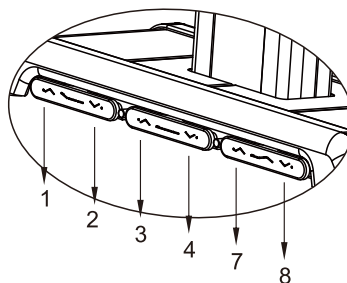

No.	Description	Operation
1	Backrest Adjustment	Backrest goes up smoothly by pressing the button.
2		Backrest goes down smoothly by pressing the button
3	Height Adjustment	The bed goes up smoothly by pressing the button
4		The bed goes down smoothly by pressing the button
5	Seat Adjustment	Seat inclining smoothly by pressing the button
6		Seat goes flat smoothly by pressing the button
7	Leg-rest Adjustment	Leg-rest will raise up smoothly by pressing button
8		Leg-rest will lower downwards smoothly by pressing button
9	Safe Lock Function	Press and Hold Safe-Lock button for 3 seconds to activate locking mode (red light comes on). To deactivate simply press and hold again for 3 seconds, the red light will go out.
10	Safe Lock Indicator Light	
11	Power Indicator	Hand Remote is connected to unit with power. No indicator Light would mean improper connection.
12	Reset Function	Press button to reset and return to upright sitting position and leg-rest will be lowered as well.

8. Technical Parameters


	USA	UK
Power	AC 100-120V , 50/60Hz	AC 220-240V , 50/60Hz
Weight Capacity	386 lbs	175 kg
Package Size	57×27×26 inch	1440×690×670mm
Net Weight	216 lbs	98kg
Gross Weight	240 lbs	109kg

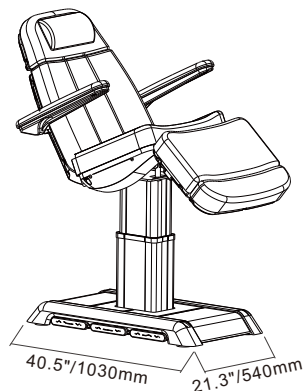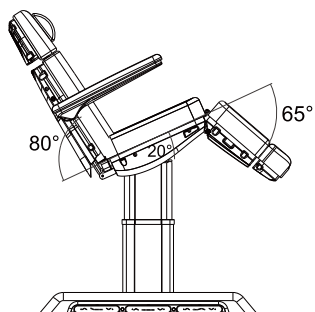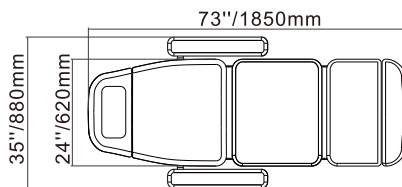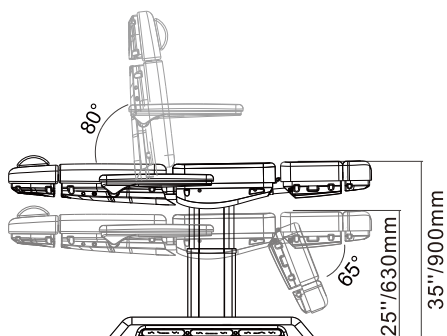

9. Maintenance

1. After every treatment, please only use neutral solution to clear the dust, stains on leather, metal part or plastic cover. Disinfecting solution like alcohol, acid or alkaline solution are forbidden. This is to prevent the lifetime of leather and plastic cover from being shorten.
2. Please lubricate the moving parts regularly (once a year)

10. Circuit System Connection Diagram

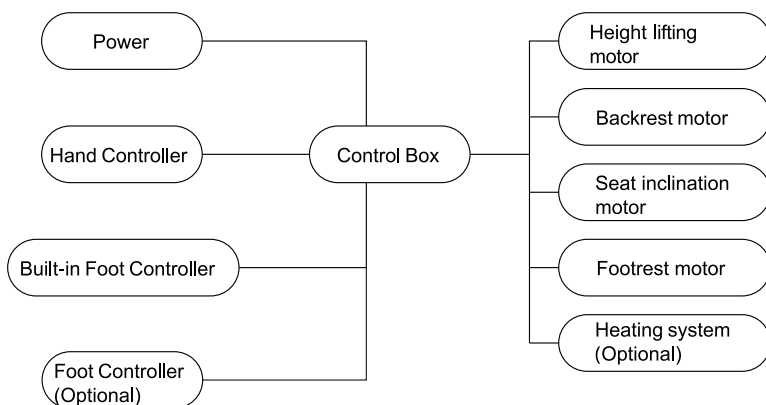

11. Troubleshooting

The Fault Phenomenon	Reason	Solution
Unresponsive Button Controls Beeping Sounds	1. The power cord is disconnected or not plugged well.	1. Connect the power cord or plug it well.
	2. Damaged Hand and/or Foot controller	2. Replace the hand controller or foot controller.
	3. Damaged built-in Foot Controls	3. Please contact maintenance center or supplier for troubleshooting.
	4. Damaged Control Box	
	5. Damaged motors	
	8. Pressing the button, the bed did not move.	1. Push the foot extension in close to the leg-rest, make sure the limitation switch is closed. Try again operating the function 2. Open the fixed leg-rest cover and backrest cover respectively, check whether the two ends of the power cord are loose, if the above situation occurs, please reconnect. 3. If problem is still not solved after above operation, please contact maintenance center or supplier to solve it.
Abnormal Sound	1. The rotating parts are short of lubricating oil.	1. Add lubricating oil.
	2. Rotating positions (such as hinge, POM sets) are short of lubricating oil.	2. Add lubricating oil.
	3. Motor quality problems.	3. Replace the motor.

If problem is still not solved after above operations, please contact maintenance center or supplier to solve it.


12. Product care




Brush away excess hair.



Clean surface with damp cloth or use simple soap & water solution.



Avoid using corrosive cleaning agents such as bleaches.



Do not remove upholstery for cleaning.

13. Warranty

The warranty period is one year. DIR warrants to you, the original buyer, that goods shall be free of defects in material and/or workmanship attributable to manufacture for one year from date of its receipt of product. Damage resulting from improper handling after merchandise is received, or from exposure to weather or extreme atmospheric conditions is not covered by the warranty.

For any other information please contact our support team:

DIR New York

575 Underhill Blvd Suite #170
Syosset, NY 11791, USA

Email: sales@dirlsalonfurniture.com
Phone: +1 (718) 628 6668
+1 (800) 728 2008
Fax: +1 (855) 628 5168

DIR Birmingham

66 Rea Street South
Birmingham
B5 6LB

Email: sales@dirstore.co.uk
Phone: +44 (0) 121 6434777

DIR London

Unit 1 River Road Business Park,
33 River Road, Barking,
Greater London, IG11 0DA

Email: sales@dirstore.co.uk
Phone: +44 (0) 20 8591 9310



Do not dispose of old or defective appliances in domestic garbage;
this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.