


# DIR<sup>®</sup>

# Maximus







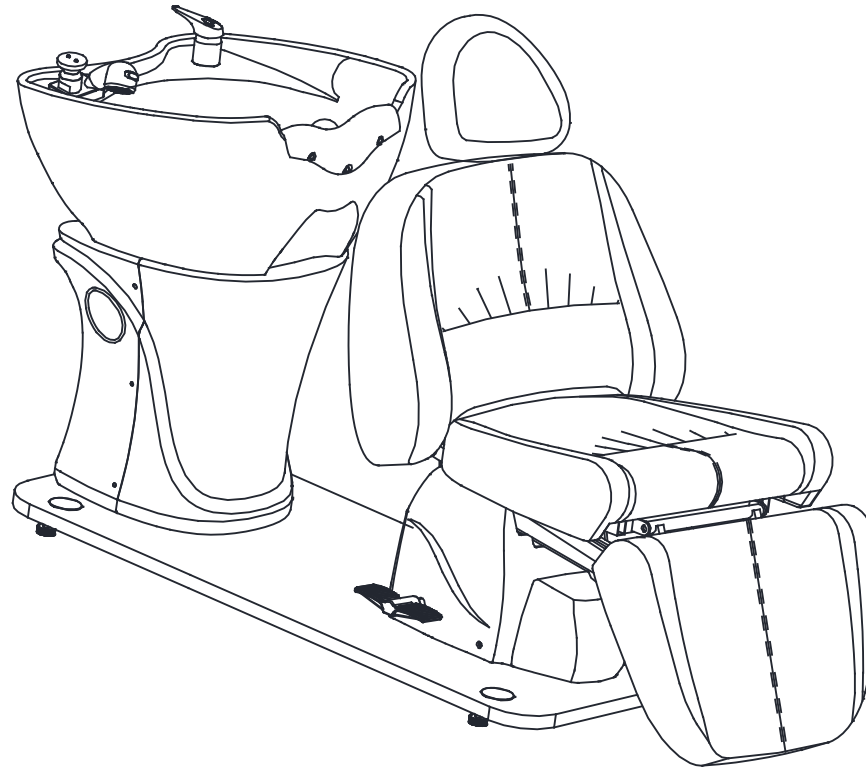

7113  
INSTRUCTION MANUAL




● **Technical data:**

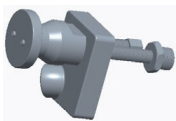	UK	USA
Dimension	198*69*87cm	78" *27 1/4" *34 1/4"
Load Capacity	200kg	441lb
N.W	129kg	284lb
G.W	172kg	379lb
Height	49~66cm	19 1/4" *26"
Padding	SPONGE	
Leather	PU/PVC	


● **Accessories Parts :**

Name	Picture	QTY
Headrest		1
Faucet		1
Shower		1
Relift Pumps		1
Pins		2
Anchoring		4
Rubber pad		1
Wrench		1

- **Assembly instruction :**
- **Install connecting rod of back rest**

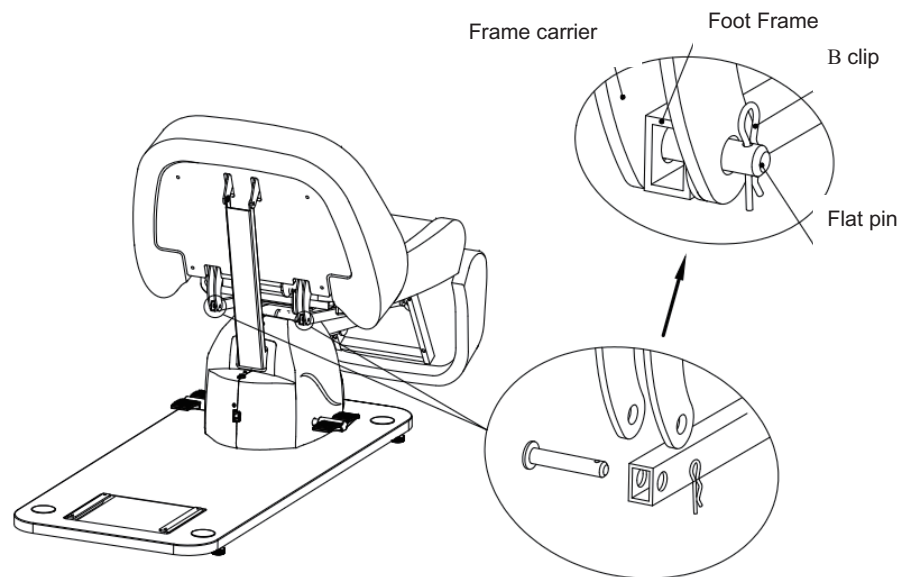


● **Position of Anchoring**

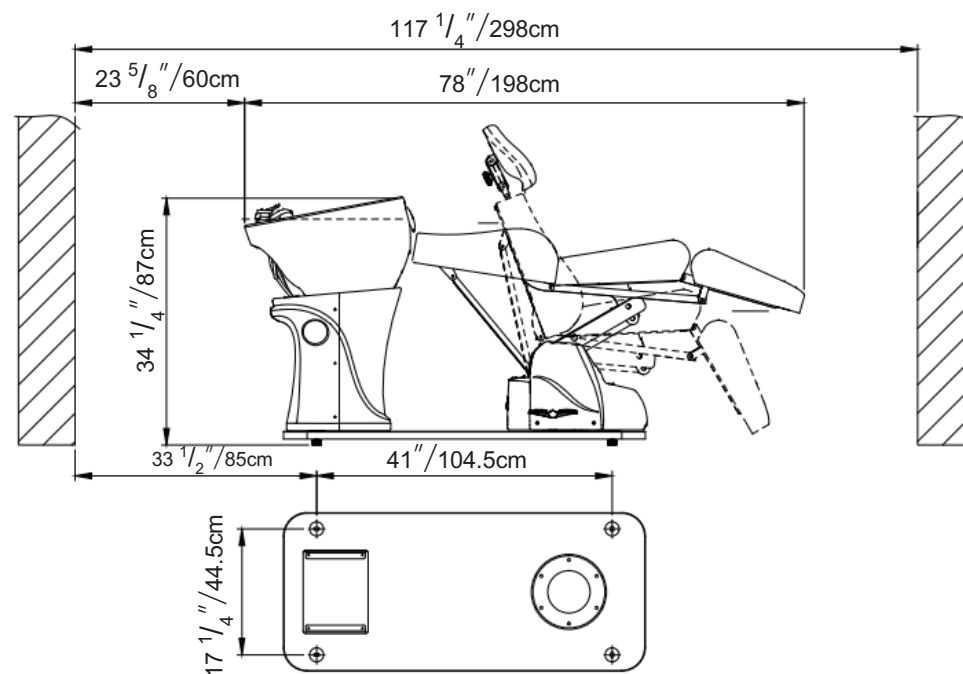


## ● Anchoring Assemble

Open the cover of stainless steel, then install anchoring

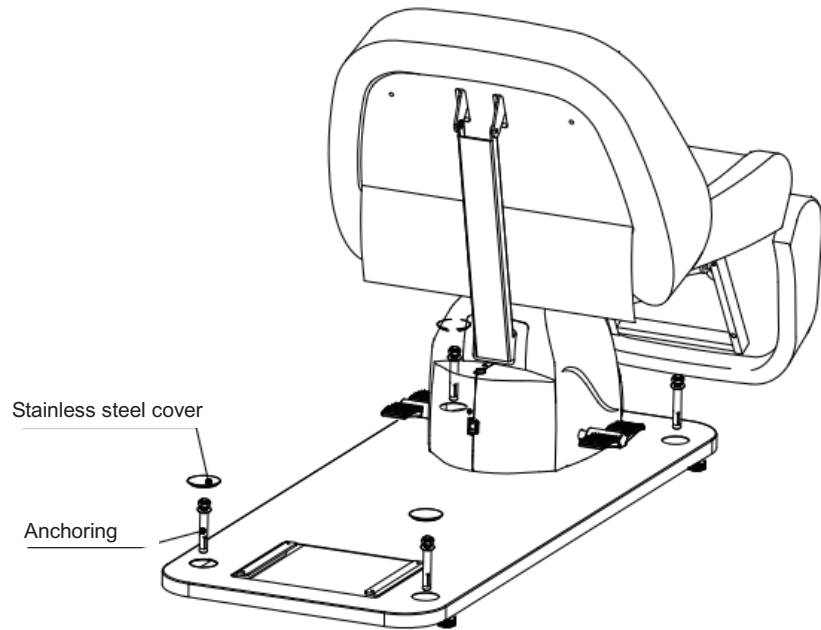


## ● Install rubber padding

- ① Cover the button then rubber padding would be installed
- ② Round rubber padding clip into the right hole

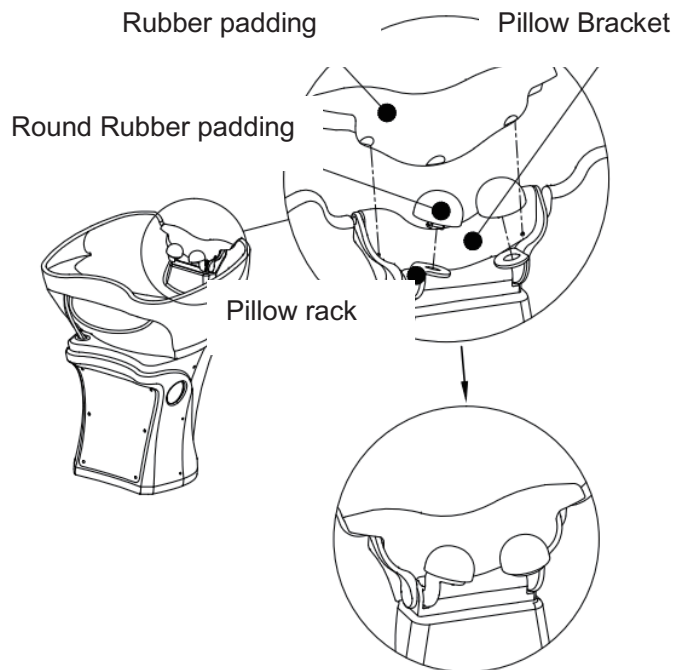


## ● Assembling the basin


- ① Take off the cover of basin's base before assemble above parts

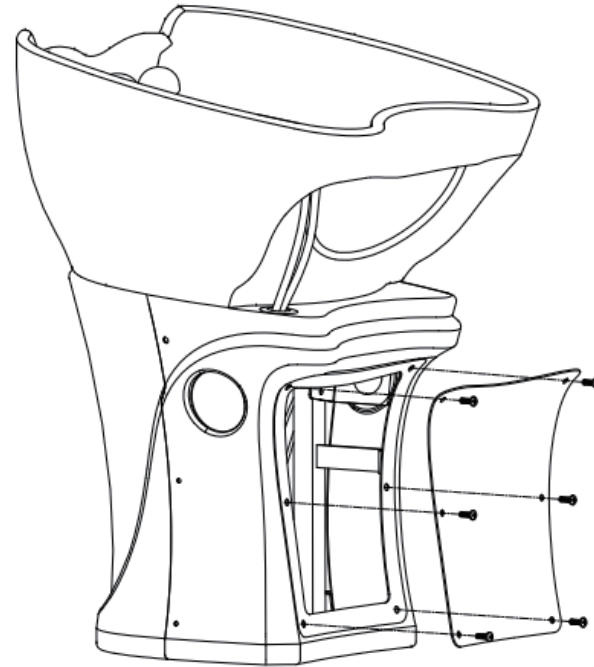


- ② Install shampoo chair, unscrewing the nut, then aim the install hole to four screws on the underframe, then screw nut tight

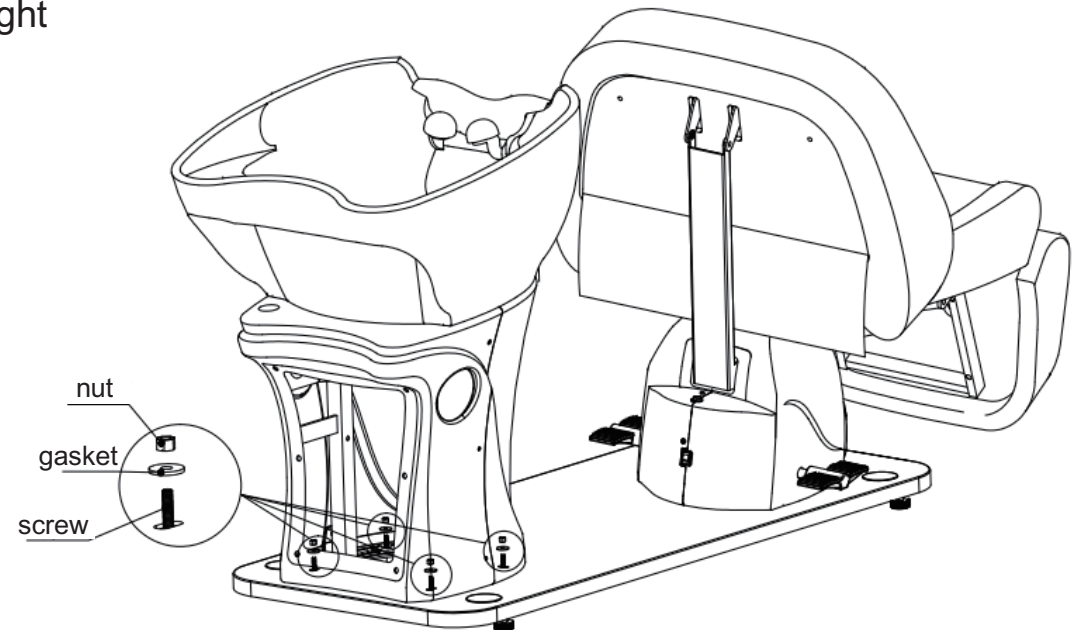


● Schematic diagram of faucet &connector box

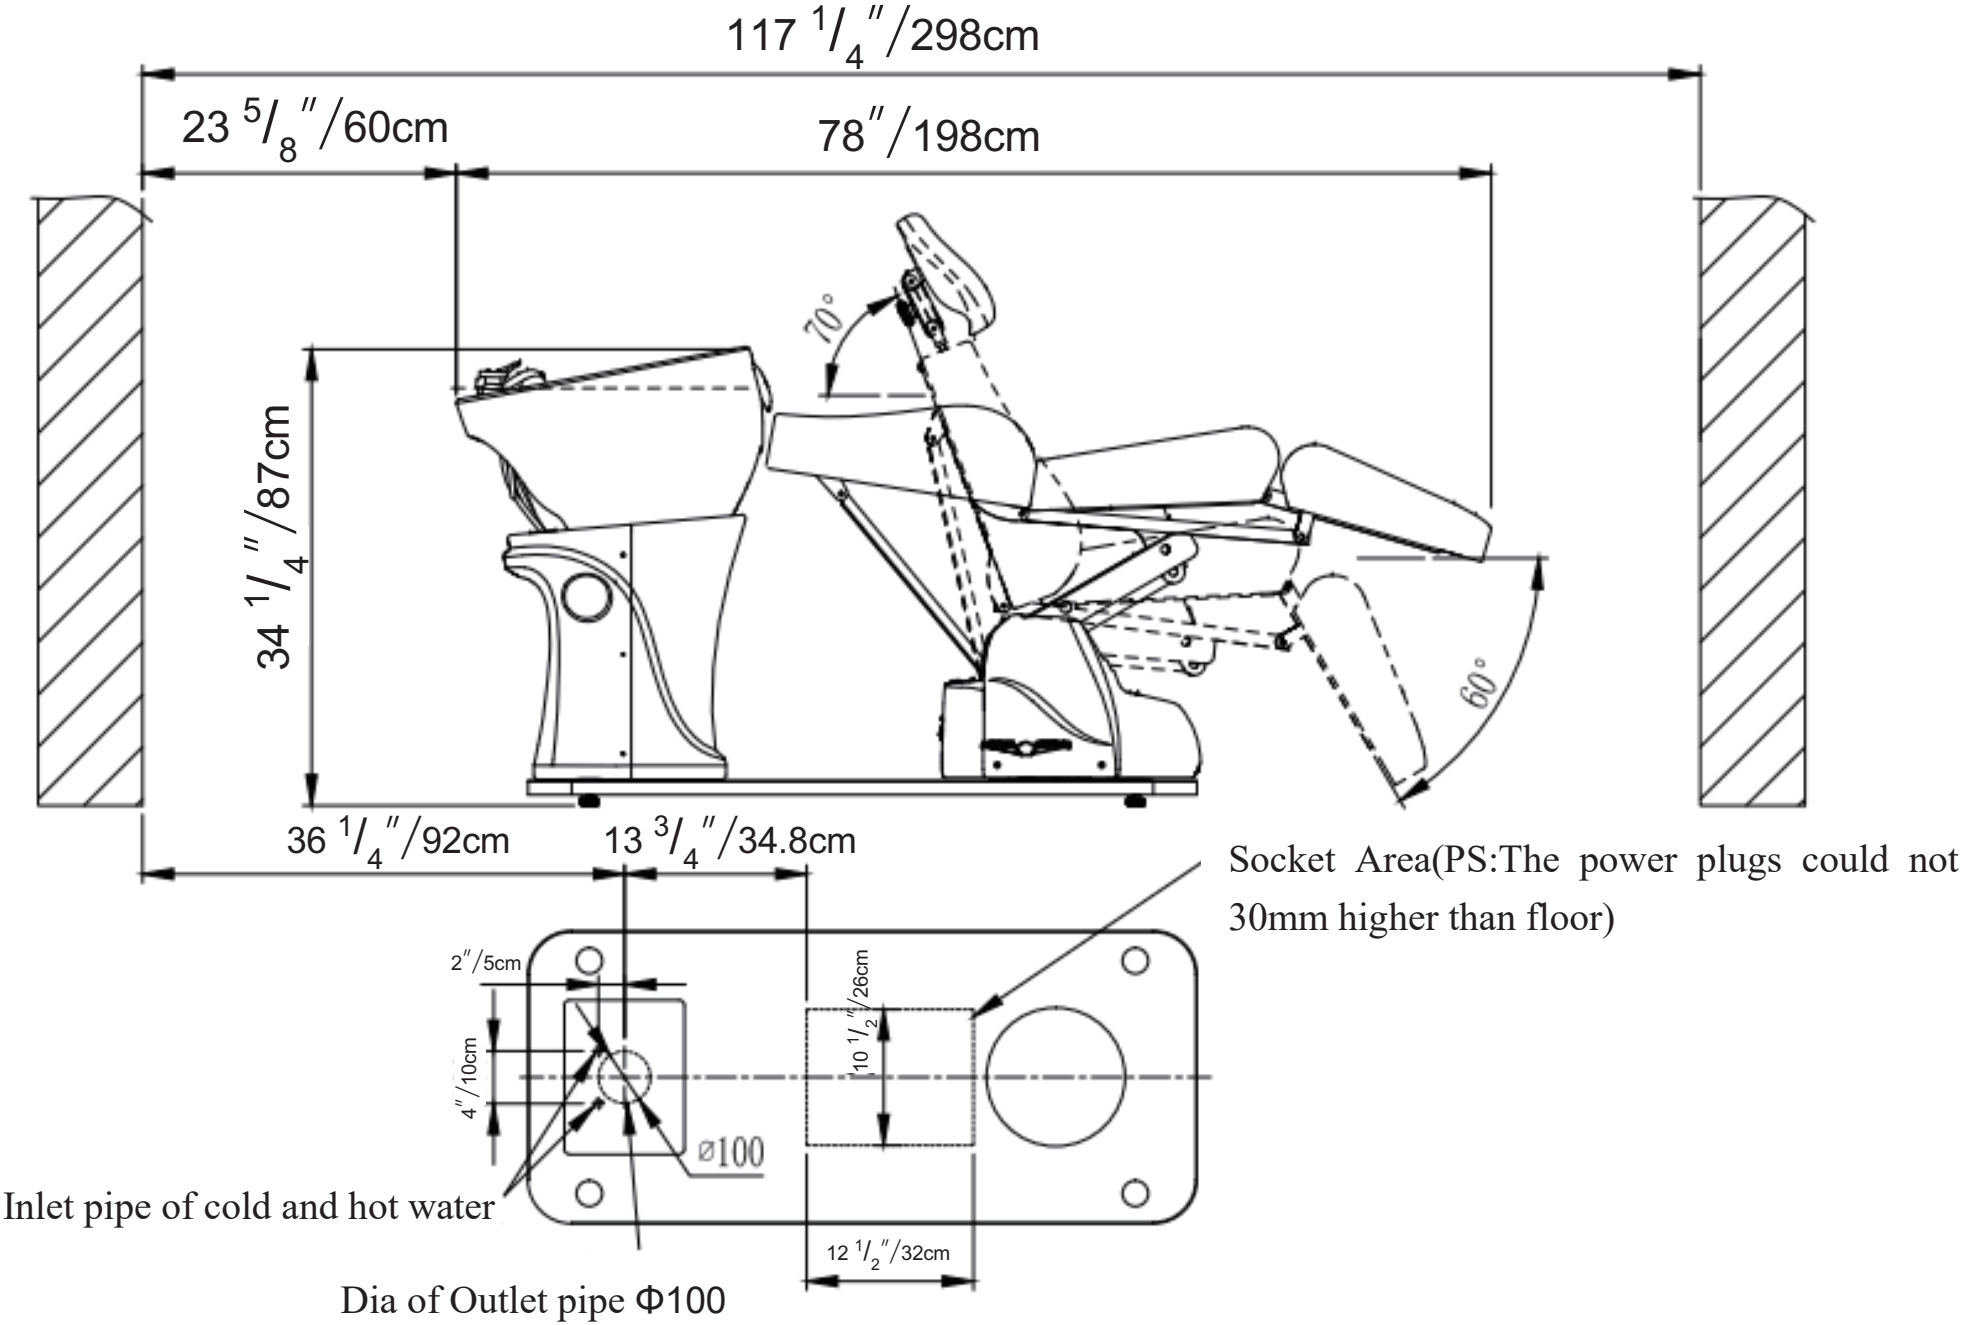


## ● Faucet installation

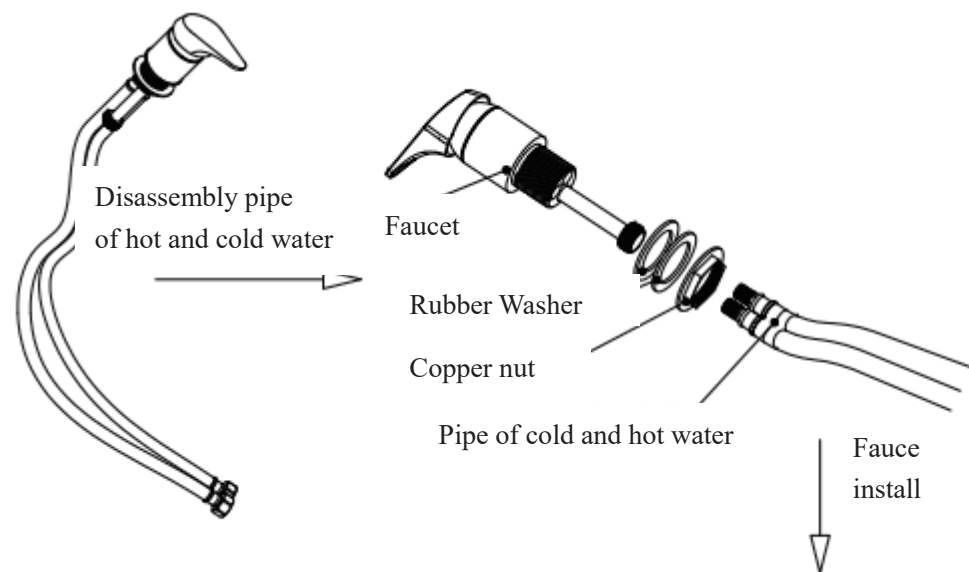

Note: Pipe of cold & hot water must connect to the hole below switch mark of cold and hot water

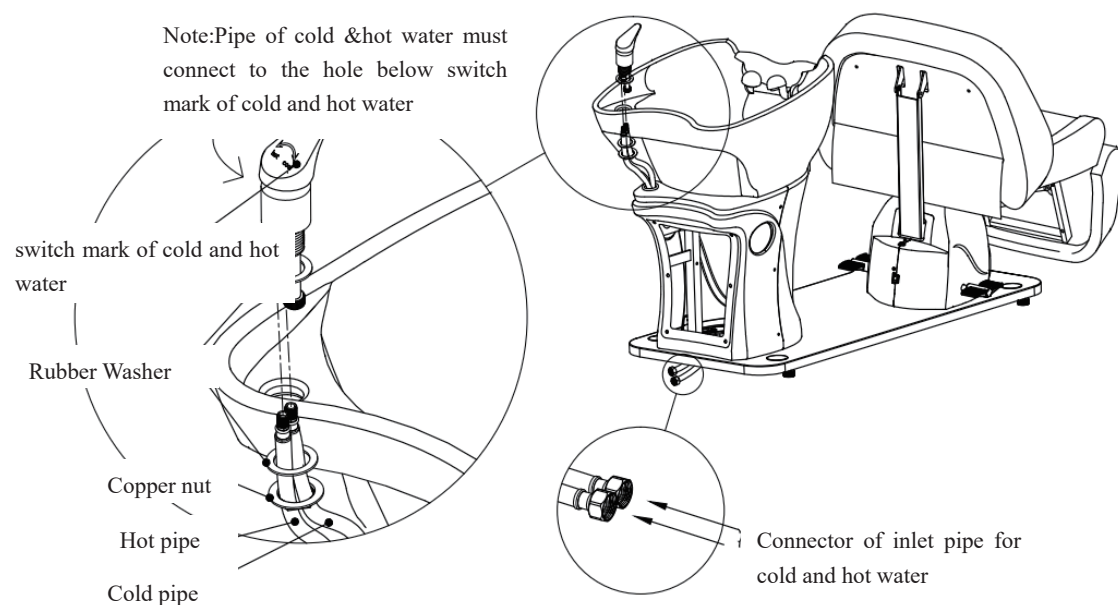


## ● Shower and valve installation

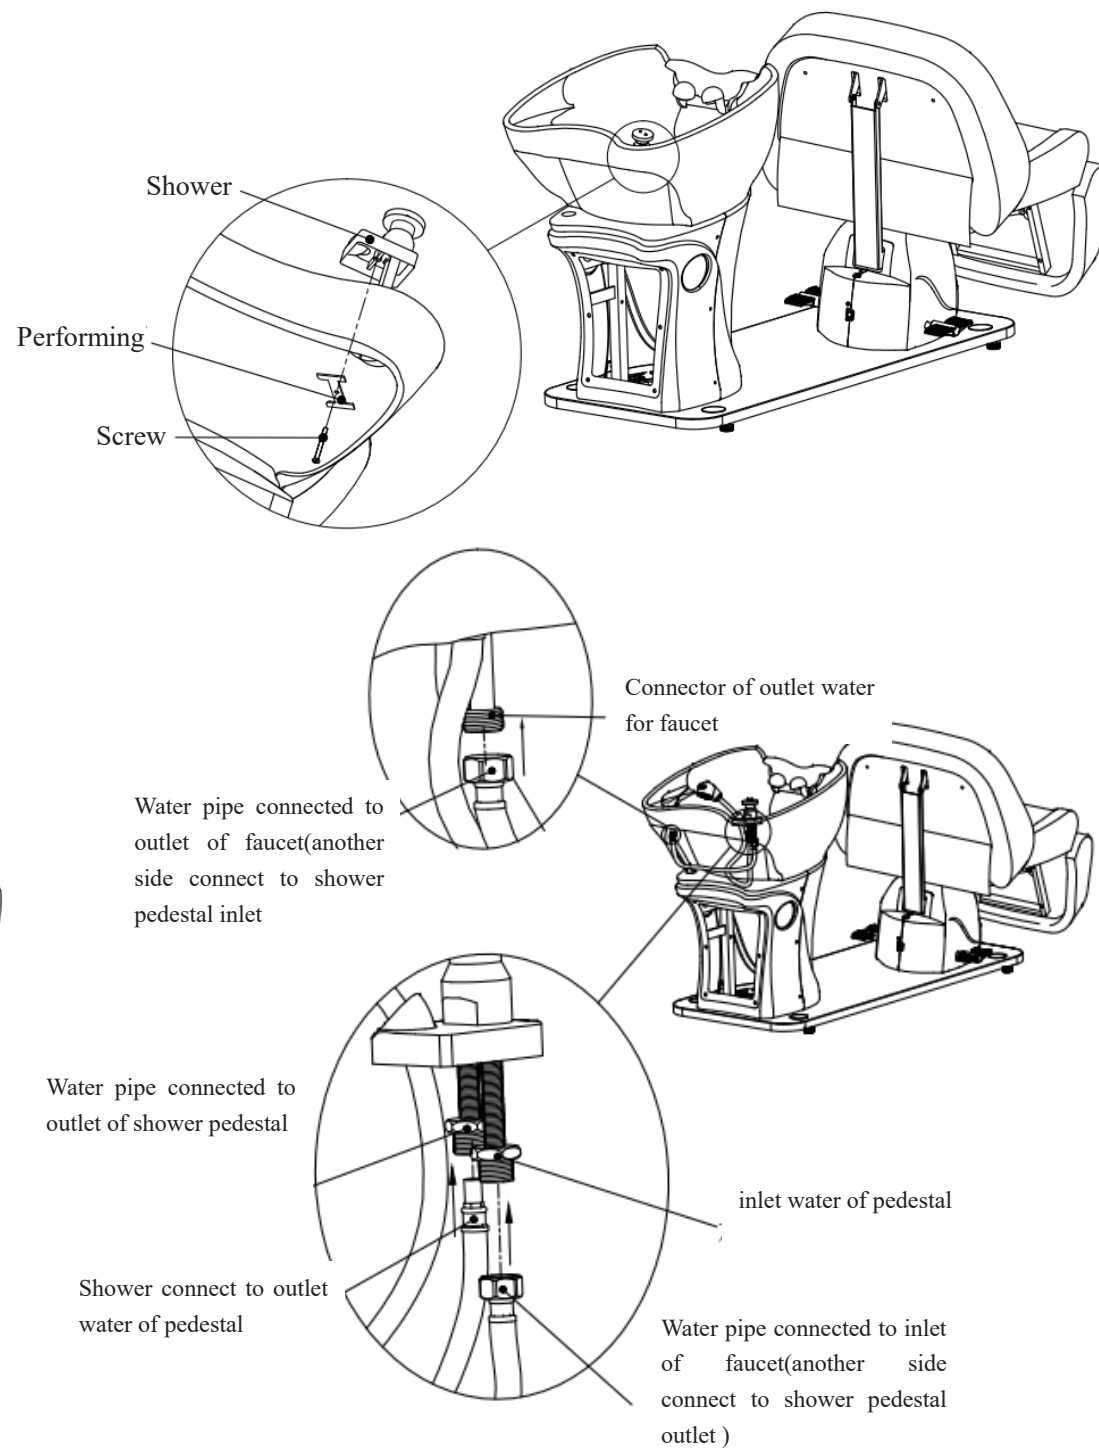




- **Outfall installation**

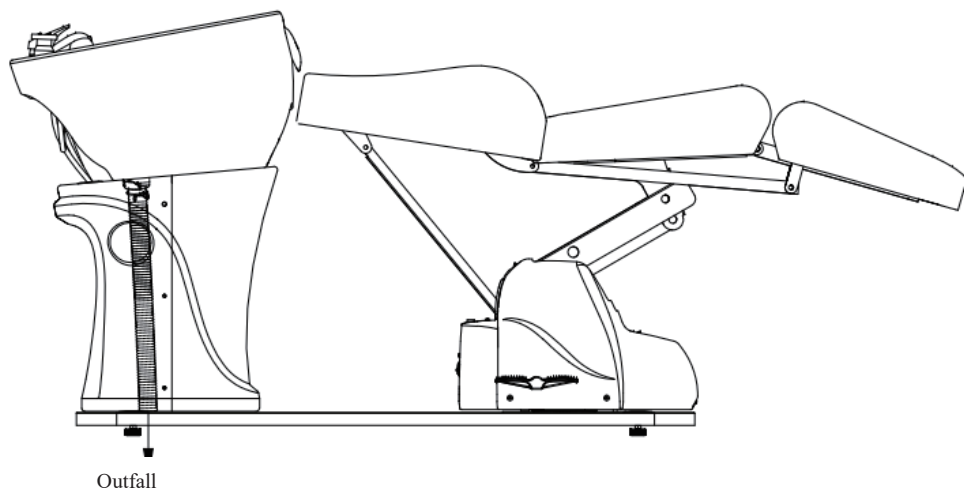


After assemble above parts ,put the back cover of basin base

- **Switch and foot control**

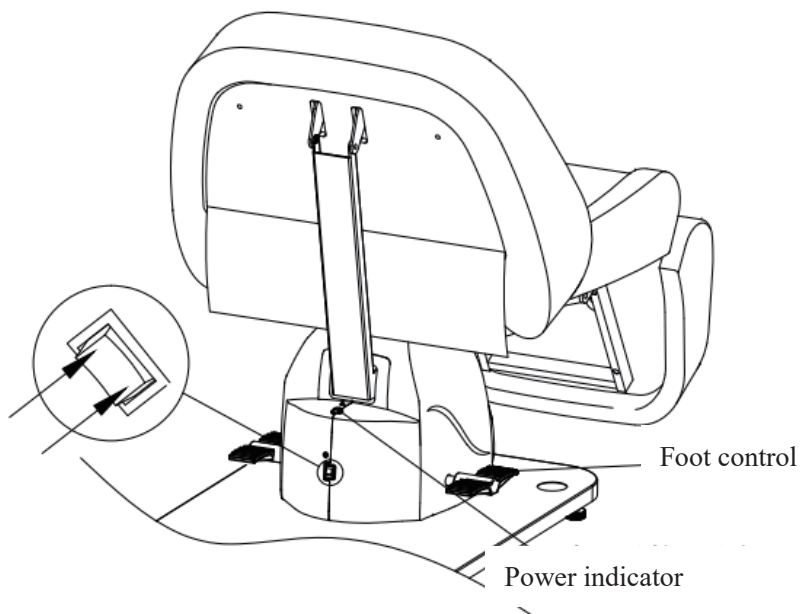


- **Height Adjusted**

Power on ,press switch, power indicator light up, step on "up" side of foot control, whole bed raise up, step on "down" side, whole bed decline.

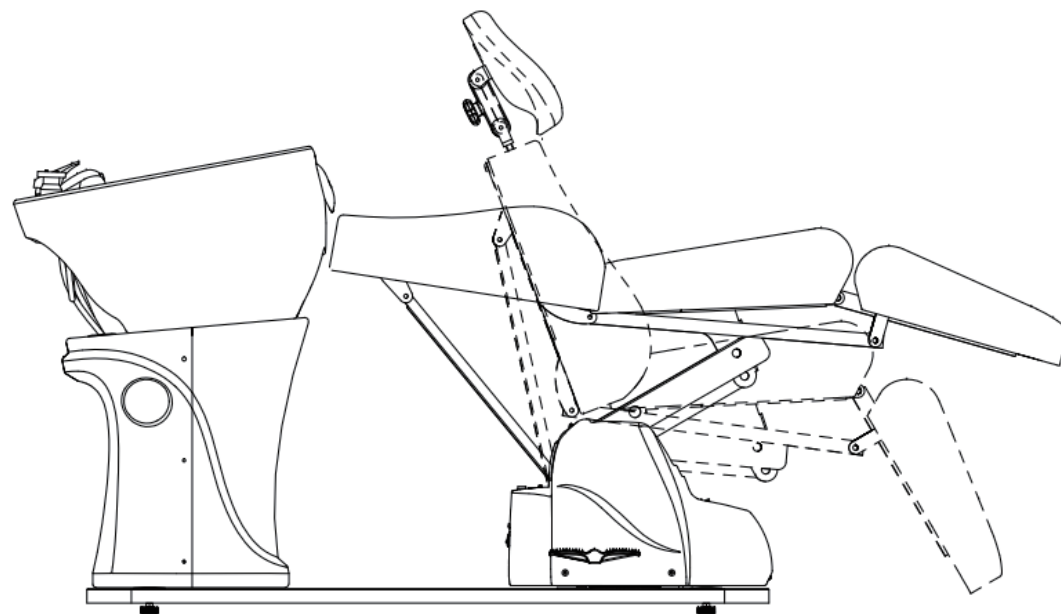


- **Rotation function**

Push forward ,then the bed could be clockwise/anticlockwise rotated

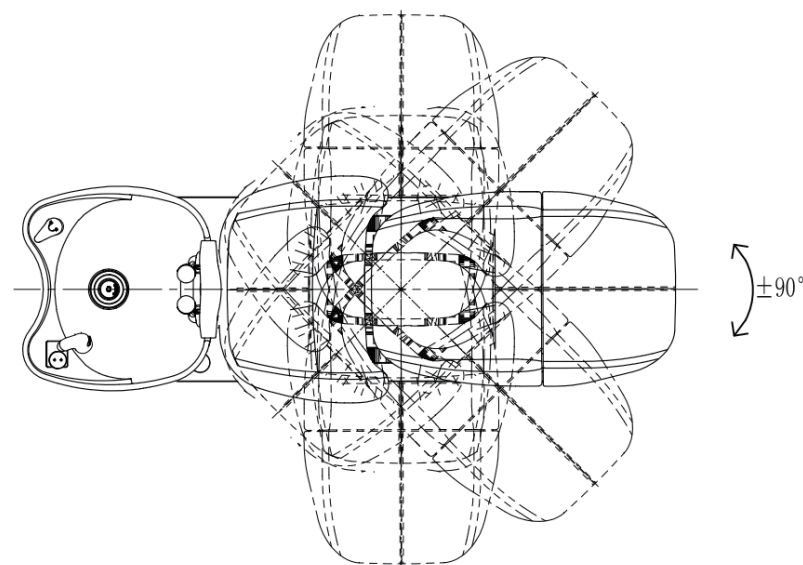


- **Headrest**

**Adjust the knob B to adjust height of headrest or disassembly headrest; Adjust the knob A to rotate or turn over the angle of headrest**

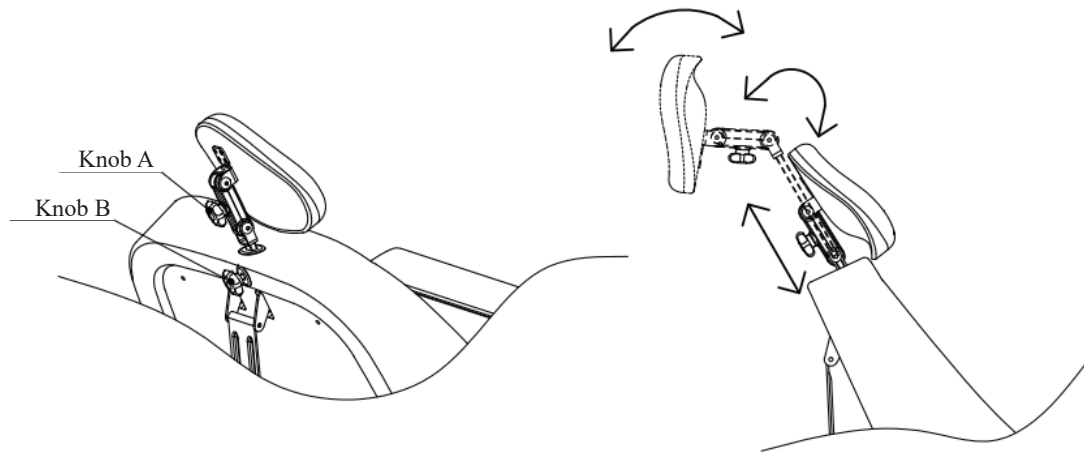

**PS:After insert headrest , pls take care of the headrest when raise up the bed , in case basin get damaged .**

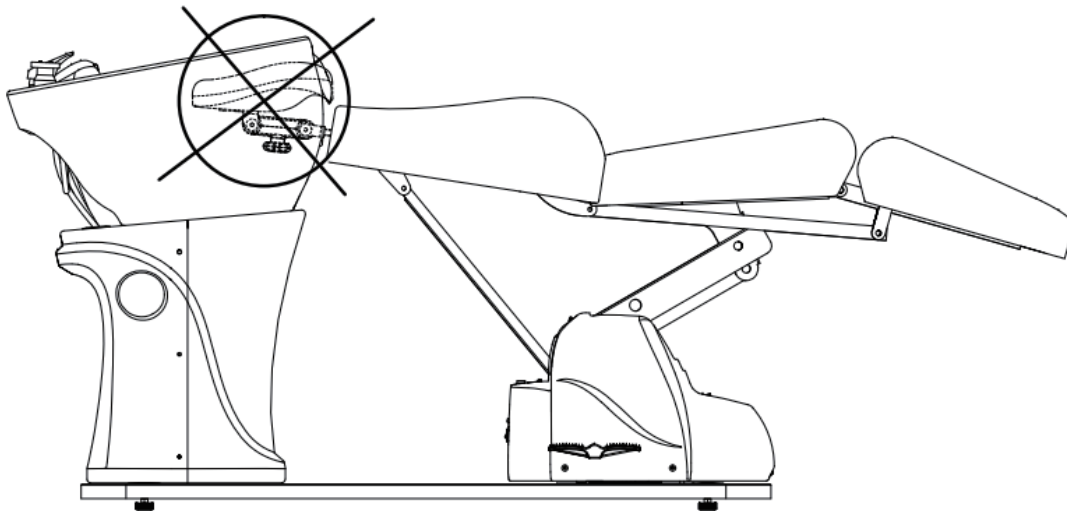

- **Notice:**

Because this bed is work with 3 wire power cables, in order to making it working properly, it has to insert to 3 holes powder socket with ground wire.


All plugs, buttons and cables couldn' t be soak in the water or other liquid.

Press control keys to adjust the height of whole bed. Forbid putting the hand, foot or head into position ①②③ when using the foot control to adjust the height of bed, as below picture.

Stop using if plugs, buttons or cables damaged.

Please note that the frequency should be 6 min/h when using the electric rod of this bed

Only allow to be maintained by professional workers.

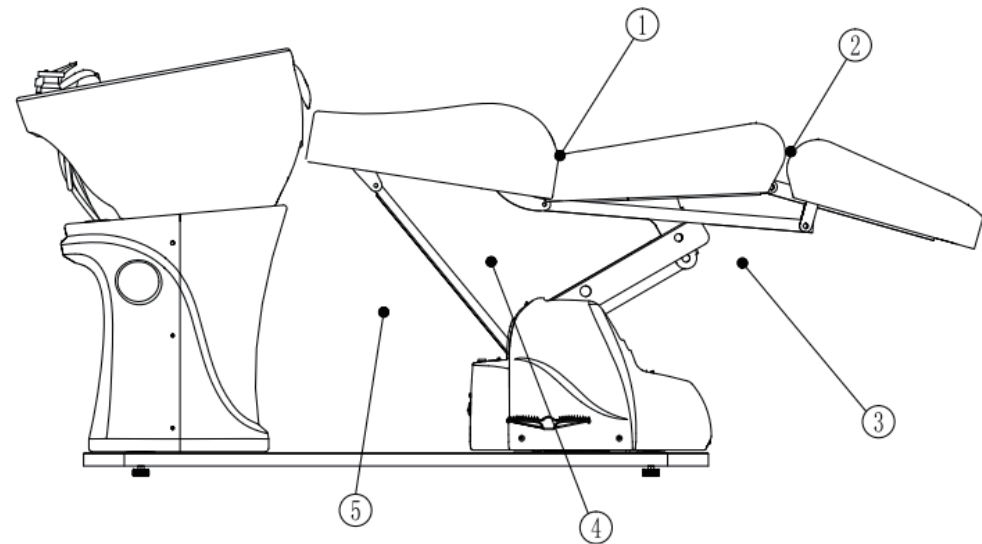

- **Precautions**

1. Someone with osteoporosis or heart problem should not use this massage chair.
2. Women being pregnant or in menstruation should not use this massage chair.
3. Someone injured or with disabilities should not use this massage chair.
4. Children under 14 years old without any supervision and someone unconscious should not use this massage chair.
5. Breakages of the power cable and plug should be eliminated before it's normally used.  
Breakages should be dealt with by someone professionals or service providers.
6. The voltage should accord with the safety voltage before it's officially used.  
And the wrong voltage may lead to the breakdown of the product.
7. Wet hand is not allowed to touch power to avoid shock.
8. The product should not plug in before it's already installed.
9. The power cable should be put away so that pedestrian will not trip up and fall.
10. The appearance of the product should be cleaned by the use of the soft towel with diluted neutral detergent.
11. It should be unplugged when it's not used.
12. Do not dismount this product without any authorization.  
Please inform the official service providers to deal with the maintenances

- **Maintenance**

1. Daily cleaning  
You can wipe out the dust by using soft dry towel.
2. Eliminating the heavy dirt

As we all know, it is hard to eliminate the heavy dirt by using normal dry towel. In this case, you can use soft towel with diluted neutral detergent to clean it first. And then you can use dry towel to scrub.

3. It's prohibited to use benzene, diluent, gasoline or other solvent  
These solvents may damage the leather or it may cause the corrosion of the products' appearance.

4. Storage and operating environment

Don't put the product under the strong sunlight and moisture environment.

Otherwise it may cause the damages of the product.

5. It is allowed to use this product under the temperature from -5°C to 50°C and the humidity from 45% to 85%.



## ● Malfunction Diagnosis

If you meet malfunction when using this product, please try the below malfunction diagnosis and eliminated operation.


Problem	Reason may cause	Solution
No reaction for the bed when press the control key	Whether the remote control switch start or not	Restart the remote control
	Whether the control key reach to end position.	Try other control keys
	Whether the plug inserts well or not	Pull out the plug and insert it again
	Whether each connecting plug for transformer insert well or not	Pull out the plug and insert it again
Bed body, Abnormal noise, shocking	Screw loose	Tighten all screws
The powder light off	Fuse wire burning -out	Replace the fuse wire
Remote light off	Remote line could not tight well or remote broken	Tighten plug if still couldn't work, then change the remote control

◆ When the improvement which is not effect on the product's basic structures, we won't inform in addition.


## Product care




Brush away excess hair

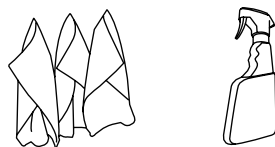

Clean surface with damp cloth or use simple soap & water solution.

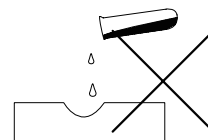

Avoid using corrosive cleaning agents such as bleaches.

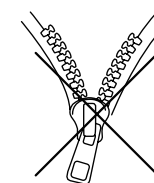

Do not remove upholstery for cleaning

## Warranty

The warranty period is one year. DIR warrants to you, the original buyer, that goods shall be free of defects in material and/or workmanship attributable to manufacture for one year from date of receipt of product. Damage resulting from improper handling after merchandise is received, or from exposure to weather or extreme atmospheric conditions is not covered by the warranty.

For any other information please contact our support team:

### DIR BIRMINGHAM

66 Rea Street South  
Birmingham  
B5 6LB  
UK

Tel:  
+44(0)121 6434777

Email:  
dirlsalon@gmail.com

### DIR LONDON

Unit 1 River Road  
Business Park  
33 River Road, Barking  
Greater London  
IG11 0DA  
UK

Tel:  
+44(0)20 8591 9310

Email:  
dirlsalon@gmail.com

### DIR NEW YORK

575 Underhill Blvd.  
Suite 170  
Syosset, NY 11791  
USA

Tel:  
+1 (718)628-6668  
+1 (800)728-2008

Email:  
sales@dirlsalonfurniture.com

### DIR IRELAND

Unit 20, Goldenbridge Ind.  
Estate Tyrconnell Road  
Inchicore  
Dublin 8  
Republic of Ireland

Phone:  
+353 (1) 429 7969

Email:  
sales.ireland@dirgroup.ie